

Current Products (as of January 1, 2019)			
Home Theater Systems	Power State Information	Power Modes	
		Standby	Networked Standby
Lifestyle® 600/650/550 (console)	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	Wi-Fi: 1.6 W Ethernet: 2.0 W Bluetooth®: 1.6 W
	Time after which equipment is automatically switched into mode	≤ 2.5 hours	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	2.0 W	
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.	<p>Wi-Fi: To deactivate Wi-Fi, press and hold the Source button on the console for 10 seconds. To reactivate Wi-Fi, press and hold the Source button on the console for 10 seconds.</p> <p>Bluetooth®: Deactivate by clearing the pairing list via the on-screen menu, the remote screen, or the SoundTouch application. Reactivate by pairing with a Bluetooth® source.</p> <p>Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>	

Home Theater Speakers	Power State Information	Power Modes	
		Standby	Networked Standby
Acoustimass® 10 Series V home theater speaker system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 10 minutes</p> <p>N/A</p> <p>N/A</p>	<p>N/A</p> <p>N/A</p>
<p>Bass Module 500</p> <p>Acoustimass wireless bass module</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 2 hours</p> <p>0.47 W</p> <p>Per Annex II 3(a) of Regulation 801/2013 ("Lot 26" amendment of 1275/2008), the requirement to deactivate a wireless port "does not apply to products which rely on a single wireless network connection for intended use and have no wired network connection."</p>	<p>Bose wireless: 0.47 W</p> <p>≤ 20 minutes</p>
<p>Bass Module 700</p> <p>Acoustimass® 300 bass module</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2 hours</p> <p>0.6 W</p> <p>Per Annex II 3(a) of Regulation 801/2013 ("Lot 26" amendment of 1275/2008), the requirement to deactivate a wireless port "does not apply to products which rely on a single wireless network connection for intended use and have no wired network connection."</p>	<p>Bose wireless: 0.6 W</p> <p>≤ 20 minutes</p>
SoundTouch® 300 soundbar	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>1.9 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press the SoundTouch icon on the remote, then press and hold "0" on the remote until the soundbar LEDs flash. Repeat to reactivate. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote for 10 seconds or via the SoundTouch application. Reactivate by pairing with a Bluetooth® source. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>	<p>Wi-Fi: 1.6 W Ethernet: 1.9 W Bluetooth®: 1.5 W</p> <p>≤ 20 minutes</p>
Soundbar 500	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.*</p> <p>* Prior to deactivating networks or entering standby mode, use the microphone on/off button to ensure the microphone is turned on (the red indicator light will be off).</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>1.6 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold the Bose Music and Skip Forward buttons on the remote simultaneously. Repeat to reactivate. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote for 10 seconds. Reactivate by pairing with a Bluetooth® source. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>	<p>Wi-Fi: 1.2 W Ethernet: 1.7 W Bluetooth®: 1.2 W</p> <p>≤ 20 minutes</p>

Home Theater Speakers	Power State Information	Power Modes	
		Standby	Networked Standby
Soundbar 700	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.*</p> <p>* Prior to deactivating networks or entering standby mode, use the microphone on/off button to ensure the microphone is turned on (the red indicator light will be off).</p>	<p>0.49 W</p> <p>≤ 2.5 hours</p> <p>1.8 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold the Bose Music and Skip Forward buttons on the remote simultaneously. Repeat to reactivate. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote for 10 seconds. Reactivate by pairing with a Bluetooth® source. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>	<p>Wi-Fi: 1.4 W Ethernet: 1.8 W Bluetooth®: 1.4 W</p> <p>≤ 20 minutes</p>
<p>Surround Speaker</p> <p>Virtually Invisible® 300 wireless surround speakers</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.46 W</p> <p>2 hours</p> <p>0.9 W</p> <p>Per Annex II 3(a) of Regulation 801/2013 ("Lot 26" amendment of 1275/2008), the requirement to deactivate a wireless port "does not apply to products which rely on a single wireless network connection for intended use and have no wired network connection."</p>	<p>Bose wireless: 0.9 W</p> <p>≤ 20 minutes</p>
Solo 5 TV sound system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.2 W</p> <p>≤ 1 hour</p> <p>N/A*</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote until the Bluetooth® indicator blinks blue. Reactivate by pairing with a Bluetooth® source.</p> <p>*product does not utilize a networked standby mode for a Bluetooth® connection and does not have the ability to be configured to a network via Wi-Fi or Ethernet</p>	<p>N/A*</p> <p>N/A*</p>

Wave Music Systems	Power State Information	Power Modes	
		Standby	Networked Standby
Wave® music system IV	Power consumption in specified power mode, at 230V/50Hz input	0.97 W	N/A
	Time after which equipment is automatically switched into mode	≤ 2.5 hours	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input		N/A
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.		N/A

Multimedia Sound	Power State Information	Power Modes	
		Standby	Networked Standby
SoundLink® Color II	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.1 W</p> <p>≤ 2 hours</p> <p>N/A*</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit for 10 seconds. Reactivate by pairing with a Bluetooth® source.</p> <p>*product does not utilize a networked standby mode for a Bluetooth® connection and does not have the ability to be configured to a network via Wi-Fi or Ethernet</p>	<p>N/A*</p> <p>N/A*</p>
SoundLink® Micro	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 10 minutes</p> <p>0.3 W</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until the voice prompt indicates that the pairing list has been cleared. Reactivate by pairing with a Bluetooth® source.</p>	<p>0.3 W</p> <p>≤ 10 minutes</p>
SoundLink® Mini Bluetooth® speaker II	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.1 W</p> <p>≤ 30 minutes</p> <p>0.5 W</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit (about 10 seconds). Reactivate by pairing with a Bluetooth® source.</p>	<p>Bluetooth®: 0.5W</p> <p>≤ 5 minutes</p>
SoundLink® Revolve+ Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 20 minutes</p> <p>0.4 W</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit for 10 seconds. Reactivate by pairing with a Bluetooth® source.</p>	<p>0.4 W</p> <p>≤ 1 minute</p>
SoundLink® Revolve Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 20 minutes</p> <p>0.4 W</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit for 10 seconds. Reactivate by pairing with a Bluetooth® source.</p>	<p>0.4 W</p> <p>≤ 1 minute</p>

Multimedia Sound	Power State Information	Power Modes	
		Standby	Networked Standby
Companion® 2 Series III multimedia speaker system	Power consumption in specified power mode, at 230V/50Hz input	0.2 W	N/A
	Time after which equipment is automatically switched into mode	≤ 2 hours	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input		N/A
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.		N/A
Companion® 20 multimedia speaker system	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	N/A
	Time after which equipment is automatically switched into mode	≤ 30 minutes	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input		N/A
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.		N/A
Companion® 50 multimedia speaker system	Power consumption in specified power mode, at 230V/50Hz input	0.48 W	N/A
	Time after which equipment is automatically switched into mode	≤ 30 minutes	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input		N/A
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.		N/A

Multimedia Sound	Power State Information	Power Modes	
		Standby	Networked Standby
SoundTouch 10 wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>1.8 W</p>	<p>Wi-Fi: 1.8 W Bluetooth®: 1.9 W</p> <p>≤ 20 minutes</p> <p>1.8 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until the Bluetooth® indicator blinks white. Reactivate by pairing with a Bluetooth® source.</p>
SoundTouch™ 20 Series III wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>1.6 W</p>	<p>Wi-Fi: 1.6 W Bluetooth®: 1.8 W</p> <p>≤ 20 minutes</p> <p>1.6 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Reactivate by pairing with a Bluetooth® source.</p>
SoundTouch™ 30 Series III wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>1.6 W</p>	<p>Wi-Fi: 1.6 W Bluetooth®: 1.8 W</p> <p>≤ 20 minutes</p> <p>1.6 W</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Reactivate by pairing with a Bluetooth® source.</p>
Home Speaker 500	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.47 W</p> <p>≤ 2.5 hours</p> <p>1.7 W</p>	<p>Wi-Fi: 1.7 W Bluetooth®: 1.3 W</p> <p>≤ 20 minutes</p> <p>1.7 W</p> <p>Wi-Fi®: Deactivate by pressing and holding the Play/Pause and Bluetooth buttons simultaneously for at least 5 seconds. Repeat to activate. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button for 10 seconds. Activate by pairing with a Bluetooth® source.</p>

Accessories	Power State Information	Power Modes	
		Standby	Networked Standby
SoundTouch® wireless link adapter	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 2 hours</p> <p>1.4 W</p>	<p>Wi-Fi: 1.4 W Bluetooth®: 1.6 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To deactivate the networks, press and hold the Control button on the back of the unit until the Wi-Fi and Bluetooth® indicators turn off. To reactivate the networks, press the Control button until the indicators turn on. Bluetooth® only: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit for 10 seconds. Reactivate by pairing with a Bluetooth® source.</p>
SoundTouch™ SA-5 amplifier	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 2.5 hours</p> <p>2.0 W</p>	<p>Wi-Fi: 1.5 W Ethernet: 2.0 W Bluetooth®: 1.6 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To deactivate networks, press and hold the unit's Control button. When the Wi-Fi indicator turns off, release the Control button. To reactivate the networks, press the unit's Control button. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>

Wellness	Power State Information	Power Modes	
		Standby	Networked Standby
Noise-Masking Sleepbuds™	Power consumption in specified power mode, at 230V/50Hz input	0.2 W	N/A
	Time after which equipment is automatically switched into mode	< 1 hour	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input		N/A
	Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.		N/A

Legacy Products (prior to January 1, 2019)			
	Power State Information	Power Modes	
		Standby	Networked Standby
Wave® SoundTouch® music system IV	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.95 W</p> <p>≤ 2.5 hours</p> <p>2.8 W</p>	<p>Wi-Fi: 2.3 W Ethernet: 2.8 W Bluetooth®: 2.3 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To deactivate the networks, press and hold the Control button on the back of the SoundTouch™ pedestal until the Wi-Fi status indicator turns off. To reactivate the networks, press the unit's Control button. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>
SoundTouch™ 20 Series III wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>2.6 W</p>	<p>Wi-Fi: 2.2 W Ethernet: 2.1 W Bluetooth®: 2.6 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Reactivate by pairing with a Bluetooth® source. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>
SoundTouch™ 30 Series III wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.4 W</p> <p>≤ 2.5 hours</p> <p>2.3 W</p>	<p>Wi-Fi: 2.2 W Ethernet: 2.1 W Bluetooth®: 2.3 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi: To deactivate Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Reactivate by pairing with a Bluetooth® source. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>
SoundTouch™ SA-5 amplifier	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.</p>	<p>0.3 W</p> <p>≤ 2.5 hours</p> <p>2.1 W</p>	<p>Wi-Fi: 2.0 W Ethernet: 2.1 W Bluetooth®: 1.6 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To deactivate networks, press and hold the unit's Control button. When the Wi-Fi indicator turns off, release the Control button. To reactivate the networks, press the unit's Control button. Ethernet: Deactivate by removing the Ethernet cable. Reactivate by inserting the Ethernet cable.</p>