

BOSE®



Bose® SoundTrue®

around-ear headphones II

diseñado para dispositivos Samsung Galaxy y dispositivos Android™ seleccionados

Owner's Guide | Brugervejledning | Bedienungsanleitung | Gebruikershandleiding

Guía del usuario | Käyttöohje | Notice d'utilisation | Manuale di istruzioni

Kezelési útmutató | Brukerveiledning | Podręcznik użytkownika | Bruksanvisning

ຄູ່ມືຜູ້ໃຊ້ | 사용자 안내서 | 用户指南 | 使用者指南 | オーナーズガイド | دليل المالك

Important Safety Instructions

Please read this owner's guide carefully and save it for future reference.

WARNINGS:

- **DON'T** use the headphones at a high volume for any extended period.
 - To avoid hearing damage, use your headphones at a comfortable, moderate volume level.
 - Turn the volume down on your device before placing the headphones on your ears, then turn the volume up gradually until you reach a comfortable listening level.
 - **DO** focus on your safety and that of others if you use the headphones while engaging in any activity requiring your attention, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad, etc. Remove the headphones or adjust your volume to ensure you can hear surrounding sounds, including alarms and warning signals
 - **DON'T** use mobile phone adapters to connect headphones to airplane seat jacks, as this could result in personal injury such as burns or property damage due to overheating.
 - **DO** remove headphones and disconnect immediately if you experience a warming sensation or loss of audio.
 - **DON'T** submerge or expose for extended period to water, or wear while participating in water sports, i.e. swimming, waterskiing, surfing, etc.
 - **DON'T** place naked flame sources, such as lighted candles, on or near the product.
 - **DO** be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.
-



This product contains magnetic material. Please contact your physician if you have any questions on whether this might affect the operation of your implantable medical device.



This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.Bose.com/compliance




This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Limited Warranty

Your Bose® headphones are covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

The warranty information provided with this product does not apply in Australia and New Zealand. See www.Bose.com.au/warranty or www.Bose.co.nz/warranty for details.

Important Safety Instructions

Names and Contents of Toxic or Hazardous Substances or Elements						
Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal parts	X	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
<p>This table is prepared in accordance with the provisions of SJ/T 11364.</p> <p>O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.</p> <p>X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.</p>						

Date of manufacture: The first underlined digit in the serial number indicates the year of manufacture; “5” is 2005 or 2015.

China Importer: Bose Electronics (Shanghai) Company Limited, Part C, Plan 9, No. 353 North Riyang Road, China (Shanghai) Pilot Free Trade Zone

EU Importer: Bose GP, Castleblayney Road, Carrickmacross, Ireland

Taiwan Importer: Bose Taiwan Branch, Room 905, 9F, Worldwide House, 131 Min Sheng East Rd, Section 3, Taipei, Taiwan, 105

Please complete and retain for your records:

The serial and model numbers can be found on the warranty card.

Serial number _____

Model number _____

Purchase date _____

We suggest you keep your receipt with this owner's guide.

Samsung Galaxy is a trademark of Samsung Electronics Co., Ltd.

Android is a trademark of Google Inc.

Contents

 
Welcome.....	5
Components	5
Wearing the headphones.....	6
Connecting to your device	6
Using the headphones with your device.....	6
Headphone controls	6
Basic functions	7
Media playback functions.....	7
Folding earcups.....	8
Reattaching earcup cushions.....	8
Troubleshooting	9
Cleaning the headphones	9
Replacement parts and accessories	9

Welcome

Thank you for purchasing the Bose® SoundTrue® around-ear headphones II for Samsung Galaxy devices and select Android™ devices. These headphones were designed to give you easy access and greater control of your device.

With Bose SoundTrue around-ear headphones II, you can immerse yourself in your music and enjoy an around-ear fit that stays comfortable for hours.

Components

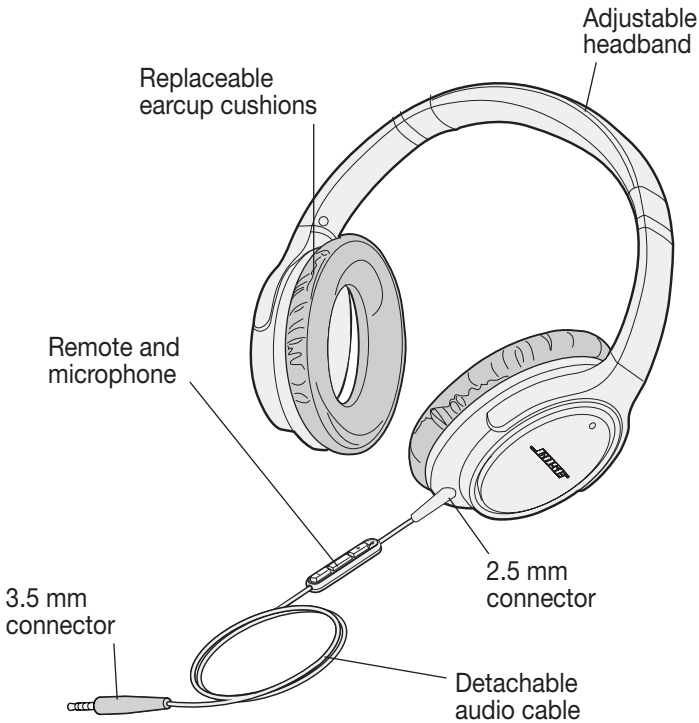

Using the headphones

Wearing the headphones

Put on the headphones using the markings which identify the left (L) and right (R) earcups. Adjust the headband so it rests gently on top of your head and the earcup cushions fit comfortably around your ears.

Connecting to your device

 
Attach the smaller (2.5 mm) connector securely to the left earcup. Attach the larger (3.5 mm) connector securely to the audio output jack of your device. You should hear or feel a click when you make these connections.

Using the headphones with your device

The headphones have a small in-line remote with an integrated microphone for convenient control of Samsung Galaxy devices and select Android devices.

Note: Full controls may not be available for some devices or applications. Refer to your device user's guide to see if remotes work with your model.

Headphone controls

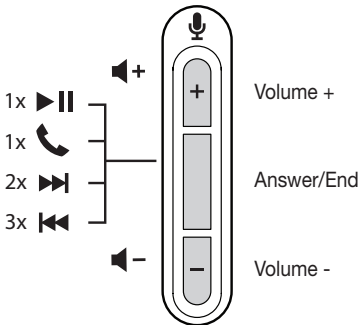

Using the headphones

Basic functions

Increase volume	Press and release the + button.
Decrease volume	Press and release the – button.
Answer a call	When you receive an incoming call, press and release the Answer/End button to answer.
End a call	Press and release the Answer/End button.
Decline an incoming call	Press and hold the Answer/End button for about two seconds, then release.
Switch to an incoming or on-hold call and put the current call on hold	While on a call, press and release the Answer/End button once. Press and release again to switch back to the first call.
Switch to an incoming or on-hold call and end the current call	While on a call, press and hold the Answer/End button for about two seconds, then release.
Use Voice Control	Press and hold the Answer/End button. <i>See your device user's guide for compatibility and usage information about this feature.</i>

Media playback functions

Play or pause a song or video	Press and release the Answer/End button.
Skip forward	Press and release the Answer/End button twice quickly.
Skip backward	Press and release the Answer/End button three times quickly.

Using the headphones

 
Folding earcups

The headphones feature rotating earcups that fold flat for easy, convenient storage.

Caution: The earcups rotate in only one direction. Incorrectly rotating the earcups can damage the headphones.

Reattaching earcup cushions

The earcup cushions are held in place by a mounting flange which snaps under eight small tabs located around the inside rim of each earcup. If an earcup cushion becomes partially or completely detached, push the mounting flange of the earcup cushion back into the earcup. Using your finger or thumb, press around the edge of the mounting flange, making sure it snaps in place all the way around the earcup.

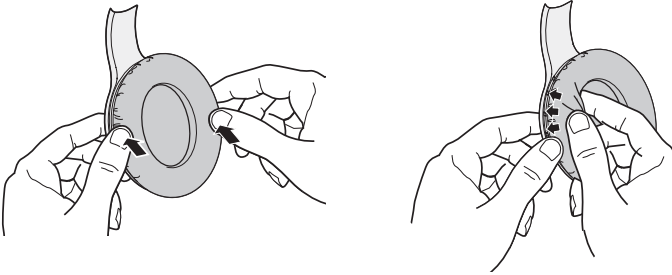

Using the headphones

Troubleshooting

If you experience any trouble using your headphones, try the following troubleshooting instructions. If you still need help, contact Bose® Customer Service.

Problem	What to do
No audio or audio in one earcup only	<ul style="list-style-type: none">• Make sure both ends of the audio cable are firmly connected.• Try another audio device.
Distorted bass	<ul style="list-style-type: none">• Make sure both ear cushions are firmly secured.
Misshaped cushion	<ul style="list-style-type: none">• The high-density earcup foam will regain its shape after a few minutes in a neutral position.
Microphone is not picking up sound	<ul style="list-style-type: none">• Make sure you are using a compatible device• Make sure the audio cable is securely connected to your device.• Make sure the microphone is not being blocked or covered. <p><i>The microphone is located on the back of the Answer/End button. (You may notice the small opening for the microphone.)</i></p>
Device is not responding to remote button presses	<ul style="list-style-type: none">• Make sure the audio cable is securely connected to your device.• For multi-press functions: Vary speed of presses.
Device is not responding to remote	<ul style="list-style-type: none">• Full controls may not be available for some devices or applications.

Cleaning the headphones

The headphones do not require scheduled cleaning. Should cleaning be necessary, simply wipe the outside surfaces with a soft cloth. Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

Replacement parts and accessories

Accessories or replacement parts can be ordered through Bose Customer Service at global.Bose.com



746181-0010

BOSE[®]
Better sound through research[®]

©2015 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM746181 Rev. 01