

**BOSE**<sup>®</sup>

# ACOUSTIC WAVE<sup>®</sup>

connect kit

for iPod

Owner's Guide

Bedienungsanleitung

Guía de usuario

Notice d'utilisation

Manuale di istruzioni

Gebbruiksaanwijzing

คู่มือผู้ใช้

사용자 안내서

用戶指南

دليل المالك

## IMPORTANT SAFETY INSTRUCTIONS

---

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth** – and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet, that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.

- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.**
- 14. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
- 15. Do not let objects or liquids enter the product – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.**
- 16. See product enclosure for safety-related markings.**
- 17. Use proper power sources – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.**

For further information on product regulatory compliance, please see the Acoustic Wave® music system owner's guide.


# SAFETY INFORMATION

## Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

 **WARNING:** To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.

 **WARNING:** Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.

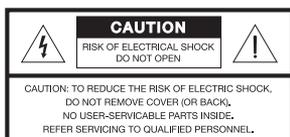

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.



The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

## Class B emissions

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations (Canada only).

 **WARNING:** Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100° C (212° F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.

 **WARNING:** Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.

 **WARNING:** Do not place any naked flame sources, such as lighted candles, on or near the apparatus.

**WARNING:** .

 **CAUTION:** Make no modification to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.

 **CAUTION:** Bose recommends using a high-quality, safety agency-approved (i.e. UL, ETL) surge suppressor on all electronic equipment.

 **Please dispose of used batteries properly**, following any local regulations. Do not incinerate.

 This product conforms to the EMC Directive 2004/108/EC and to the Low Voltage Directive 2006/95/EC. The complete Declaration of Conformity can be found at [www.Bose.com/static/compliance/index.html](http://www.Bose.com/static/compliance/index.html)

 **Note:** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.

 **Note:** The product must be used indoors. It is neither designed nor tested for use outdoors, in recreational vehicles, or on boats.

 **Note:** This product is intended to be used only with the power supply provided.

 **CAUTION:** Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

## Contents of your kit



Universal iPod dock  
(iPod not included)



Remote control



RCA audio cable

U.S./Canada 120V;  
Japan 100V



EU/AU 220-240V

OR



Power Pack only (left) or Power pack with line cord (right)

## Compatibility


This kit is fully compatible with most iPod models.

For the Acoustic Wave® connect kit to work as expected, your iPod must have the latest version of iPod software installed. If you need to upgrade, simply visit the Apple iPod website and follow the instructions there.

# USING YOUR ACOUSTIC WAVE® CONNECT KIT

## Recommended placement

We recommend that you place the dock to the right of your Acoustic Wave® music system II so that your iPod has minimal effect on FM or AM reception.

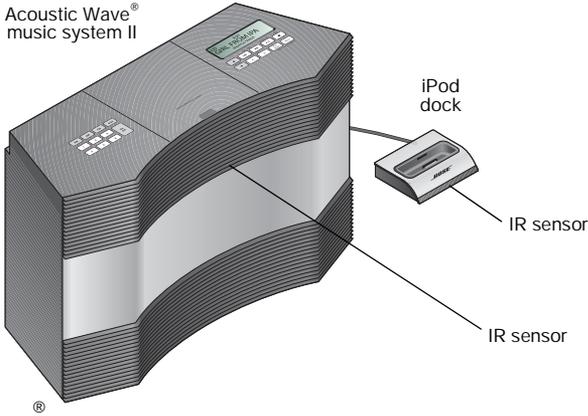



Be sure the IR sensor on the front of the iPod dock is visible and aligned with the Acoustic Wave system IR sensor so both products respond to the remote.

## Connecting the dock

Please be sure to make all other connections before plugging these products into a power outlet.


Connect the dock to the Acoustic Wave music system II (as shown below) or to the Acoustic Wave Music system with CD changer (as shown on page 5).

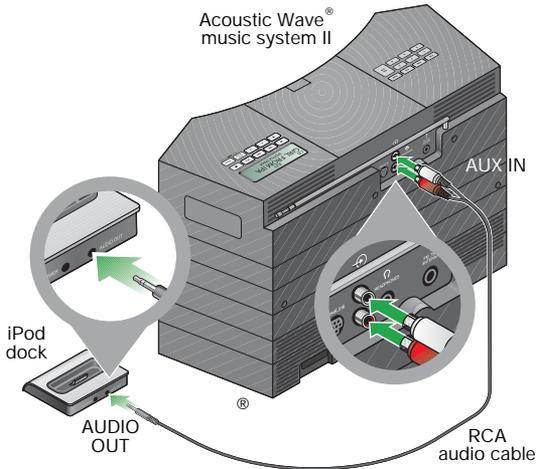

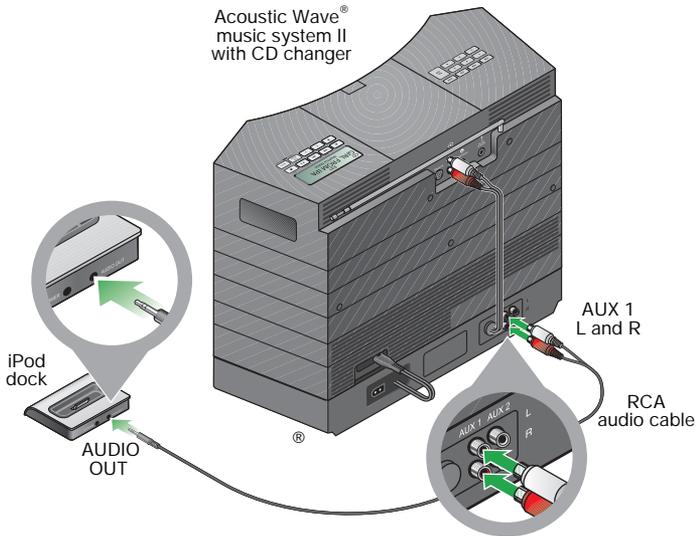

### ***Connecting the dock to power***

1. Connect the free end of the power pack cable to the dock.
2. Plug the power pack into an AC (mains) outlet.

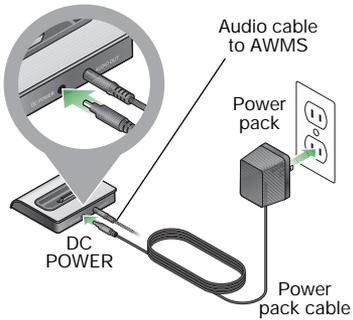


## USING YOUR ACOUSTIC WAVE® CONNECT KIT

### Control of your iPod and Acoustic Wave® II system

We recommend replacing the remote that came with your Acoustic Wave® II system with this new remote (shown below). Then you can use the new remote exclusively (not the buttons on your Acoustic Wave® II system), to keep your iPod and system performing together as intended.

**Note:** The remote that came with your Acoustic Wave® system can also be used to control the iPod kit. Use the AUX button on the original remote instead of the iPod button on the new remote.

Most of the remote control buttons are described in your Acoustic Wave® II system owner's guide. The remote buttons below provide added features.

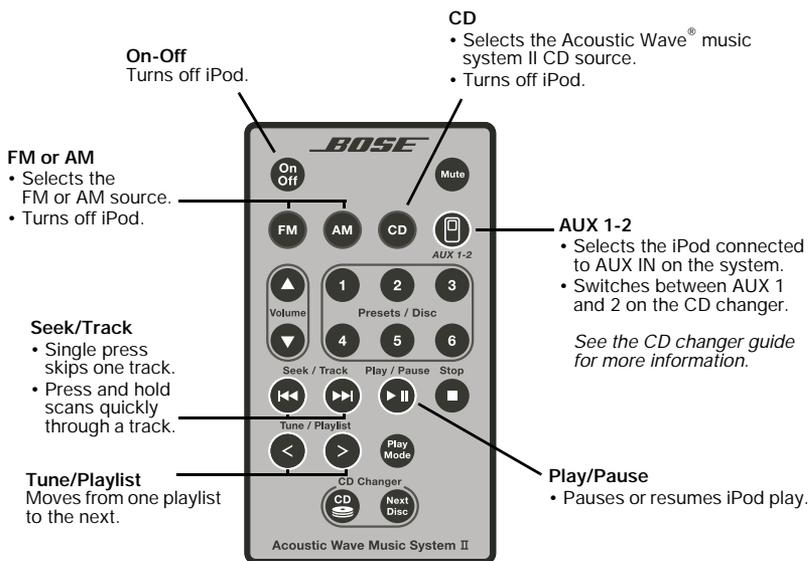

The response to some remote commands depends on which source (FM/AM/CD/iPod/AUX) is playing. If the remote does not work as you expect, press the button for that source to reset the intended mode of operation.

### For use with the CD changer

To hear your iPod play, you may need to press the AUX 1-2 button to select the input used to connect the dock. The selected input appears on the CD changer display.

## Docking your iPod

Insert your iPod firmly into the dock and make sure it is securely seated in the dock adapter. Your iPod turns on in a paused state and begins charging, as needed. Even if the paused iPod turns off automatically, it continues to charge.

If you prefer, you can replace this dock adapter with the adapter specifically designed for and provided with your iPod. Use a fingernail or a slender tool carefully to pry the adapter free, as shown.



## Playing your music

Be sure to aim the remote so its infrared (IR) signals reach the sensor on the front of the dock. Then use these buttons as follows:



- Press **iPod** to turn on your system and begin iPod playback.

Play / Pause



- Press **Play/Pause** to pause or resume iPod play.

Tune / Playlist



- Press **Tune/Playlist** to move from one playlist to another.
- Press **Play** to hear that list play.

Seek / Track



- Press **Seek/Track** once to skip back or ahead one track.
- Press and hold **Seek/Track** to scan through a track.



- Press **Volume** to adjust the sound volume.

Your Acoustic Wave® system is designed to work with an iPod set at full volume.

Volume adjustments can be made using the new remote, instead of using the iPod control.

**Note:** *Volume changes using the iPod controls will not affect the Acoustic Wave system volume.*




- Press **On-Off** once to turn off both products, aiming the remote at the dock until the iPod turns off.

- Press any source button (**FM-AM** or **CD**) to turn off the iPod and listen to that source.

**Important note:** *Having your iPod turned off helps prevent interference when you switch to an FM or AM station.*

## Troubleshooting

<i>Problem</i>	<i>What to do</i>	
The remote does not control the iPod.	Press <b>iPod</b> to reset the mode of operation for the iPod.  You may then need to press <b>Play/Pause</b> to resume play.	   Play / Pause
The iPod is on when it should not be.	If the system is off or you are playing another source, press <b>iPod</b> .  Then press <b>On-Off</b> or another source button ( <b>AM/FM</b> or <b>CD</b> ). <i>With the remote aimed properly, your iPod should turn off within 2 seconds.</i>	  
The volume varies when the iPod plays different songs.	Use the new remote <b>Volume</b> to set the volume to the level you prefer for a particular song. <i>The recording quality of songs varies, producing inconsistent play volumes.</i>	
The iPod is connected to the CD changer and it is on but does not play.	Be sure the audio cable from the dock is connected to INPUT AUX 1 on the changer.  Press <b>iPod</b> and check to see that AUX 1 appears on the CD changer display.  You may then need to press <b>Play/Pause</b> .	   Play / Pause
The Bose® system speakers play even when headphones are plugged into the docked the iPod.	Connect the headphones to the mini jack on the Acoustic Wave® system. <i>This silences the system so the sound plays through the headphones only.</i>	

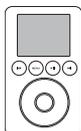

If your iPod has four buttons above the touch wheel, it is not compatible with this Acoustic Wave connect kit.

## ***Battery replacement***

To replace the remote control battery, use a Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032, 3-volt lithium battery. Be sure to match the + polarity on the battery to the + symbol inside the battery tray. Refer to your Bose® system owner's guide for further information.

## ***Acoustic Wave system limited warranty***

For information on the Limited Warranty for this Bose® product, please refer to the owner's guide for the Acoustic Wave® music system II.

*iPod is a trademark of Apple Inc., registered in the U.S. and other countries. The distinctive design of the Acoustic Wave® music system is a registered trademark of Bose Corporation in the U.S. and/or other countries. All other marks are registered trademarks and trademarks of Bose Corporation.*



316767-0010

***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

©2008 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
AM316767 Rev 01