

BOSE[®]



SOUNDDOCK[®] SERIES III
DIGITAL MUSIC SYSTEM

 
IMPORTANT SAFETY INSTRUCTIONS


Please read this owner's guide


Please take the time to carefully follow the instructions in this owner's guide. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

WARNING: To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.

WARNING: Do not expose the apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic product, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.

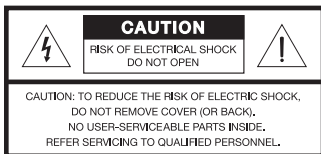

 The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNINGS and CAUTIONS

- Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100° C (212° F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Danger of explosion if battery is incorrectly replaced. Replace only with an agency approved (ex. UL) CR2032 or DL2032 3-volt lithium battery.
- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.

NOTE: The product label is located on the bottom of the product.

NOTE: This product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.

NOTE: This product is intended to be used only with the power supply provided.

NOTE: Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.



WARNING: Contains small parts which may be a choking hazard. Not suitable for children under age 3.



Please dispose of used batteries properly, following any local regulations. Do not incinerate.



This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.Bose.com/compliance.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth** – and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
10. **Only use attachments/accessories specified by the manufacturer.**
11. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
12. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.

13. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
14. **Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
15. **See product enclosure for safety related markings.**
16. **Use proper power sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

Information about products that generate electrical noise

USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the antenna in the device receiving the interference.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada

This product complies with CAN ICES-3 (B) /NMB-3 (B).

FCC Warning

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

SOUNDDOCK® SERIES III DIGITAL MUSIC SYSTEM

 
Thank you for your purchase

Congratulations on your choice of the SoundDock® Series III digital music system from Bose.

Designed specifically to work with iPod and iPhone models with a Lightning connector, this system provides high-quality audio performance that invites your music to come out and play. You'll find that it attracts a wide audience of people who love the sound.

Unpacking and setting up

Check the carton for all of the parts shown. Save the carton for possible future use. It provides the best means to repack the system for transporting it outside your residence.

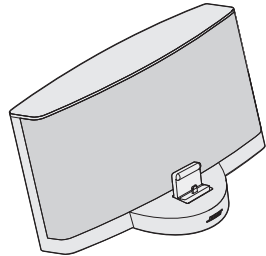

❑ SoundDock Series III digital music system



❑ Remote control

 


❑ Power pack



❑ Power cord


1. Place the system on a firm and level surface.
2. Plug the power pack into the **DC POWER** connector on the rear of the system.
3. Plug the small end of the power cord into the connector on the power pack.
4. Plug the other end of this cord into a wall outlet. You will hear a short tone indicating a power connection has been made.

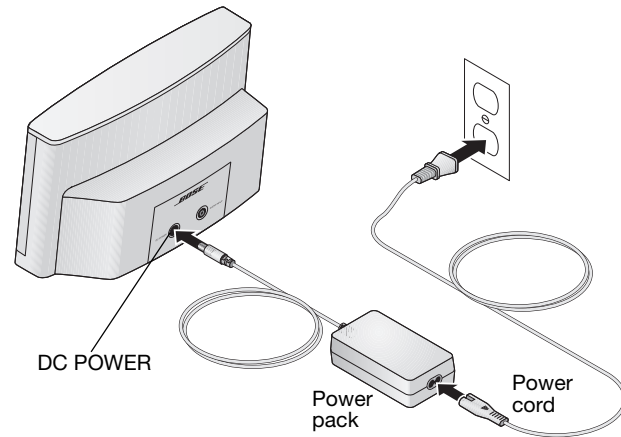

Playing your iPod/iPhone

1. Line up the connector on the iPod or iPhone with the connector on the dock. Firmly insert the iPod or iPhone into the dock.

 Note: If your iPod or iPhone has a case, you may need to remove the case in order to properly dock the iPod or iPhone.

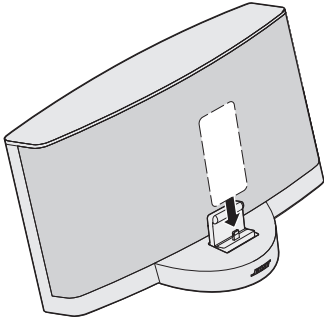

2. Press the Play/Pause button on the SoundDock III system remote. The remote controls system functions and basic iPod or iPhone functions.

Note: Be sure the music application on your iPod or iPhone is open and ready to play.

3. Adjust the volume using the SoundDock III system remote or the volume controls on the iPod or iPhone.

Using the remote

Touch any button (except Off) to turn on the SoundDock III system.

Off

 
- Turns off both your iPod or iPhone and the system.

Volume

- Press and hold to change the volume quickly.

Skip/Scan back

- Press once to skip to the beginning of the current track.
- Press twice to skip to the beginning of the previous track.
- Press and hold to scan backward quickly.

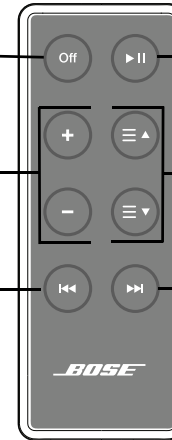

Play/Pause

- Halts and resumes play.
- Press and hold to play another connected device while your iPod or iPhone charges.

Playlist select

- Moves to the next or previous playlist.

Skip/Scan forward

 
- Press once to skip to the next track.
- Press and hold to scan forward quickly.

SOUNDDOCK® SERIES III DIGITAL MUSIC SYSTEM

Using another audio device

You can play another audio device by connecting it to the system. This requires a cable with a 3.5mm mini plug at one end (not provided).

1. Set the audio device to slightly below full volume, then plug it into the AUDIO INPUT connector.

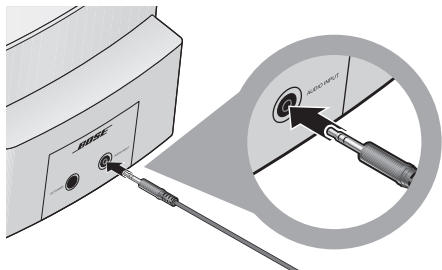

2. If your iPod or iPhone is in the system dock and charging, press and hold the Play/Pause button for three seconds to switch to the other device.
3. Adjust the volume using the SoundDock III system remote or the volume controls on the device.

Other buttons on the remote do not control this other device. To return to listening to your iPod or iPhone, press the Play/Pause button once.

 
Maintaining the system

Changing the remote control battery is the only regular maintenance that is required. You may also clean the system.

Replacing the remote battery

When the remote stops operating or its range seems reduced, it is time to change the remote battery.

1. Using a coin, turn the battery cover slightly counterclockwise.
2. Remove the cover and insert the new battery (CR2032 or DL2032) flat side up, with the + symbol in view.
3. Reseat the cover and turn it clockwise to lock into place.

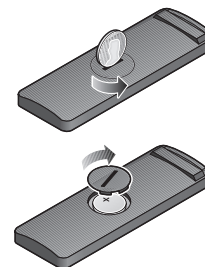

WARNINGS:

- Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate.
- Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Danger of explosion if battery is incorrectly replaced. Replace only with an agency approved (ex. UL) CR2032 or DL2032 3-volt lithium battery.

Cleaning the system


Wipe the system using a soft, dry cloth. You can also lightly vacuum the grille.

- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill or objects to drop into any openings.

SOUNDDOCK® SERIES III DIGITAL MUSIC SYSTEM

Troubleshooting

Problem	What to do
Your iPod or iPhone does not dock properly	<ul style="list-style-type: none"> • Remove your iPod or iPhone from the dock and check for obstructions on the connectors. Wait five seconds, then line up the connector on the iPod or iPhone with the connector on the dock and firmly reseal the iPod or iPhone. You may need to do this a few times. • If your iPod or iPhone has a case, you may need to remove the case in order to properly dock the iPod or iPhone.
No sound	<ul style="list-style-type: none"> • Increase the volume setting for the system, using the SoundDock III system remote. • Increase the volume on the iPod or iPhone or your second audio device, if it is playing. • Make sure the system is plugged in, your iPod or iPhone or other audio device is turned on, and audio is playing. • Press the Play/Pause button on the remote control. Press and hold this button to hear a second device while the iPod or iPhone is charging. • Unplug the power cord for one minute, then plug it back in. This resets the system (you should hear a tone when the system is powered back on). • Make sure you have the latest version of software on your iPod or iPhone.
Your iPod or iPhone does not navigate playlists as expected when using the remote	<ul style="list-style-type: none"> • Make sure the Playlist mode is selected on your iPod or iPhone.

Problem	What to do
<p>Your iPod or iPhone does not respond to the SoundDock® III system remote control buttons shown:</p> 	<ul style="list-style-type: none"> • Remove your iPod or iPhone from the dock, wait five seconds, then firmly reseal the iPod or iPhone. • Try the remote from a different location. If it works there, check for interference from bright room lights or sunlight. Wipe off the small lens on the front end of the remote with a clean, dry cloth. • Make sure there is a clear pathway between the remote lens and your SoundDock III system. • Remove and reinsert the battery as shown on page 6. • Replace the remote control battery as shown on page 6.
<p>Your SoundDock III system does not respond to any controls</p>	<ul style="list-style-type: none"> • Unplug the power cord for one minute, then plug it back in. This resets the system. (You should hear a tone when the system is powered back on.) • Contact your local Bose® dealer about the problem.
<p>Your iPod or iPhone does not charge</p>	<ul style="list-style-type: none"> • Remove your iPod or iPhone from the dock and check for any connection obstructions. Reseat the iPod or iPhone firmly. • If your iPod or iPhone has a case, you may need to remove the case in order to properly dock the iPod or iPhone. • Make sure your iPod or iPhone is a compatible model (see page 11).

SOUNDDOCK® SERIES III DIGITAL MUSIC SYSTEM

Warranty

Your Bose® SoundDock® Series III digital music system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to do so will not affect your limited warranty rights.

Customer Service

For questions about the SoundDock Series III digital music system, contact your local Bose dealer. To contact Bose directly, see the address list included in the carton.

Technical Information

Power rating

100-240V \sim 50-60Hz, 1.5A Max.

System size and weight

6.65"H x 11.91"W x 6.48"D (16.89 cm x 30.26 cm x 16.47 cm)

4.6 lb (2.1 kg)

Made for:

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 5

SoundDock and the SoundDock system design are registered trademarks of Bose Corporation in the U.S. and other countries.

iPhone, iPod, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.



362678-0010



BOSE[®]
Better sound through research[®]

©2012 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM362678 Rev. 00