

BOSE®





WAVE® MUSIC SYSTEM

Owner's Guide | Bedienungsanleitung | Notice d'utilisation | Manuale di istruzioni | Gebruiksaanwijzing

Safety Information

- WARNING:** To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- WARNING:** The apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus. As with any electronic products, take care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- CAUTION:** To reduce the risk of electric shock, do not disassemble this product unless you are qualified. Refer servicing to qualified service personnel.

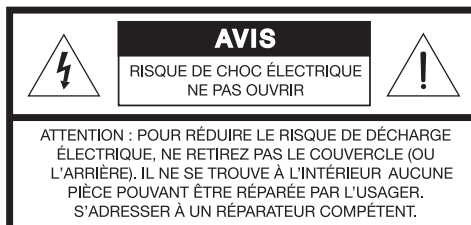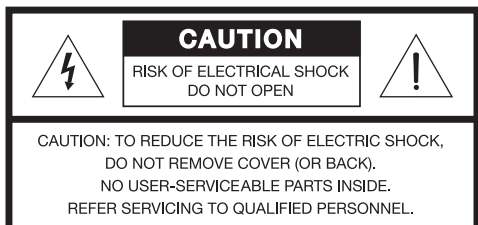

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.




The exclamation mark within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

- CAUTION:** To prevent electric shock, match the wide blade of the line cord plug to the wide slot of the AC (mains) receptacle. Insert fully.
- CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The compact disc player should not be adjusted or repaired by anyone except properly qualified service personnel.

Class 1 laser product

This CD player is classified as a CLASS 1 LASER PRODUCT according to EN 60825-1:1994+A1+A2, IEC 60825-1:1993+A1+A2.

The CLASS 1 LASER PRODUCT label is located on the bottom of the unit.

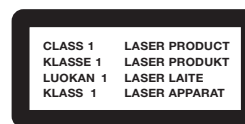

- WARNING:** Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F) or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

- WARNING:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

Note: The product label is located on the bottom of the product.

Please read this owner's guide


Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

CE This product conforms to all EU Directive requirements as applicable by law. The complete Declaration of Conformity can be found at: www.Bose.com/static/compliance.

Setting Up Your Wave® Music System	4
Unpacking	4
Selecting a location	4
Connecting to power	5
Setting the clock	6
A Brief Introduction to Some Special Features	7
Introduction	7
Special Features	7
Operating Your Wave® Music System	8
Remote control operating guide	8
Reading the display	9
Turning the Wave® music system on and off	9
Controlling the volume	9
Setting up automatic shutoff (Sleep)	9
Listening to FM/AM Radio	10
Turning the radio on	10
Tuning the radio	10
Storing a radio station to memory (Presets)	11
TALK RADIO mode	11
Playing Compact Discs	12
Playing audio compact discs (CDs)	12
CD Play Modes	12
Playing music file (MP3) CDs	13
Navigating through music files	14
Play modes for MP3 CDs	14
Setting and Using The Alarm	15
Setting the alarm	15
Waking to a radio station or CD	15
Setting the alarm time	15
Using the alarm	16
Stopping a sounding alarm	16
Turning alarm on and off	16
Snoozing an alarm	16
Connecting Other Equipment	17
Rear panel input/outputs	17
Connecting an external FM antenna	17
Using headphones	18
Using your Wave® music system with other audio equipment	18
Connecting your Wave® music system to a Lifestyle® system	19
Personalising Your Wave® Music System	21
The set-up menu	21
Adjusting the snooze time	22
Changing the Radio Data System (RDS) information setting	22
Selecting a music source to automatically play after a CD ends	23
Changing the clock time format	23
Adjusting the display brightness	24
Setting the room code	24
Enabling the low-power mode	25
Performing a system reset	25
Maintaining Your Wave® Music System	26
Cleaning	26
Replacing the remote control battery	26
Troubleshooting	27
Customer service	27
Limited warranty	28
Technical information	28
Index	30

Unpacking

Please check the packaging for the following items:

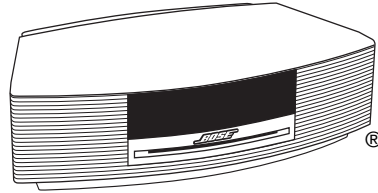

Wave® music system



Remote control
(battery pre-installed)



Demonstration CD



Euro power cord*



*In the UK the appropriate
power cord is included.



Antenna adapter

For your records

Now is a good time to record the serial number of your new Wave® music system. The serial number is located on the bottom of the enclosure.

Serial number _____

Purchase date _____

We suggest you keep your sales receipt with this owner's guide.

Selecting a location


- Place your Wave® music system on a table or other flat surface.
- To enjoy maximum performance, place your Wave® music system across the room from where you will be listening.
- For best performance, place your Wave® music system within half a metre of a wall, and avoid placing directly in a corner.

Note:


- *DO NOT place your Wave® music system on a metal surface. It could interfere with AM reception.*
- *DO NOT place your Wave® music system on a heat-sensitive surface. Like all electrical equipment, it generates some heat.*
- *DO NOT use your Wave® music system in a damp location or any other place where moisture can get inside.*

Connecting to power

1. Insert the small end of the power cord into the connector labelled **AC POWER** on the rear panel of your Wave® music system.
2. Plug the power cord into an electrical outlet.

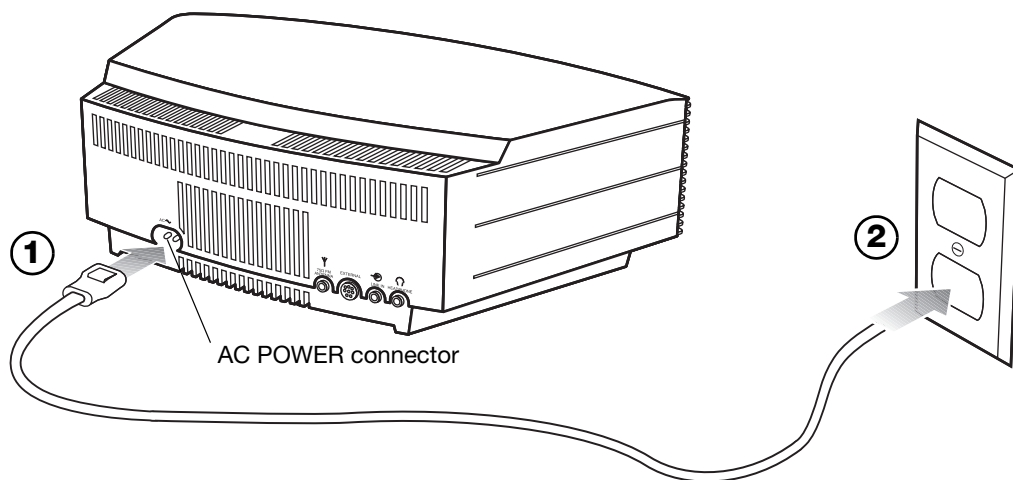


3. Unwind and straighten the power cord to ensure the best FM reception. Your Wave® music system uses the power cord as an FM antenna.

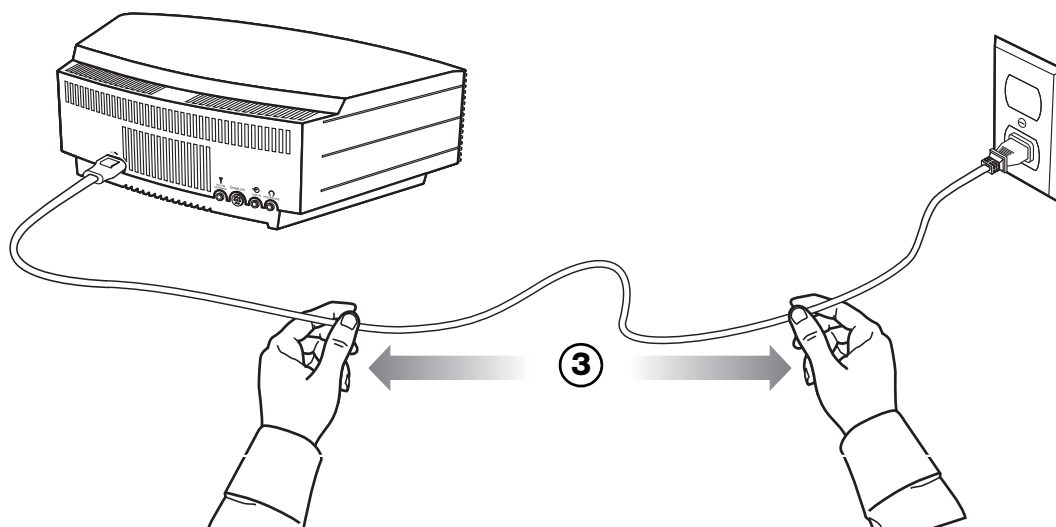

Setting the clock

 After plugging in your Wave® music system, set the clock using the remote. Your Wave® music system is easily operated using the remote control. Just aim the remote at the front panel and press the buttons.



1. Press and hold **Time -** or **Time +** until **- CLOCK SET -** appears on the display.



2. Press **Time -** to adjust the displayed time backwards or press **Time +** to adjust the displayed time forwards until it matches the current time. You can also press and hold for rapid adjustment.


3. Wait five seconds for the system to exit the clock set-up mode automatically.

To change the clock display from 12-hour (AM/PM) time to 24-hour (military) time, see “Changing the clock time format” on page 23.

🎵 **Note:** In the event that the Wave® music system loses power, the clock time and other system settings are stored in backup memory for up to 48 hours. This feature retains the systems settings when you unplug and move the unit or when a power outage occurs.

🎵 **Note:** Press-and-hold operations require holding the button down for at least one second.


Introduction

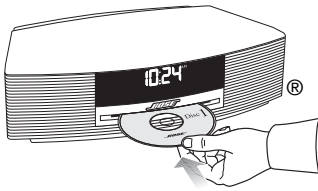

Thank you for purchasing the Bose® Wave® music system, an elegant way to bring high quality sound into any room.

We encourage you to begin by listening to the demonstration CD provided. Simply insert the demonstration disc and your Wave® music system will play the CD automatically. For more details on playing CDs, see “Playing audio compact discs (CDs)” on page 12.

Over fourteen years of research by Bose Corporation brings you the benefits of award-winning patented acoustic waveguide speaker technology. Using this technology, a tube efficiently transfers energy from a small speaker to the outside air over a wide range of low frequencies. And, long waveguides, folded into intricate patterns, fit into products small enough to be placed comfortably in your home. Your Wave® music system features new dual tapered waveguide speaker technology, connecting two speakers to two 66 cm tapered waveguides which combine to produce unprecedented instrument timbre from a system this size.

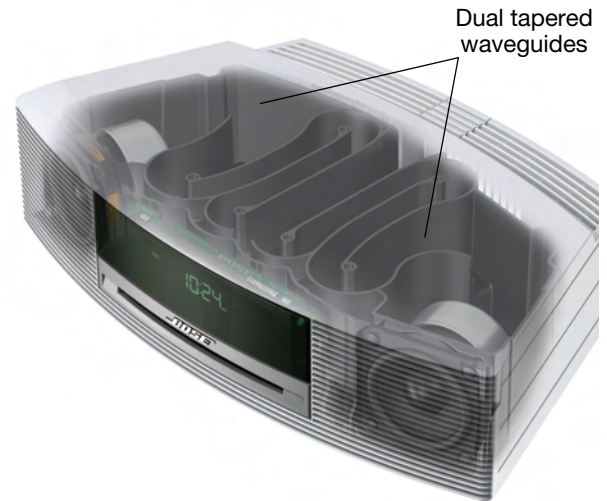

Special Features



Alarm settings let you wake to your favourite radio station or CD track

You can set your Wave® music system to wake you to your favourite CD track. For more details, see “Waking to a radio station or CD” on page 15.



You can listen to your favourite music file (MP3) CDs

Your Wave® music system can play MP3 music files recorded on CD-R and CD-RW discs. You can use the remote control to navigate easily through your MP3 files and play your favourites. For details, see “Playing music file (MP3) CDs” on page 13.



The set-up menu allows you to personalise system operation

Factory system settings have been set to satisfy most owners. If you wish to change the settings, see “Personalising Your Wave® Music System” on page 21.

The set-up menu allows you to change the following system settings to your liking:

- Snooze time
- Play a radio station automatically after a CD ends
- Clock time format (12- or 24-hour)
- Display brightness level
- Bose® link room code
- Reset to factory settings

Remote control operating guide

Your Wave® music system is easily operated using the remote control. Just aim the remote at the front panel and press the buttons. The remote normally works within 6 metres of the front panel.

Throughout this owner's guide you will see button icons to the left of the operating instructions. These icons refer to buttons located on the remote control.

Note: Press-and-hold operations require holding the button down for at least one second.

Note: Pressing **FM/AM**, **CD** or **AUX** automatically turns on the Wave® music system to the source selected.

On/Off (Stop Alarm)

- Turns the power on or off (page 9).
- Stops a sounding alarm (page 16).

FM/AM

- Turns on the radio.
- Press again to switch between FM and AM (page 10).

Mute

- Press to silence audio (page 9).
- Press again to restore audio.

Volume

- Turns volume up or down (page 9).

Seek/Track

- *Press*: finds the next radio station with a strong signal (page 10), or skips to next/previous CD track (page 12).
- *Press and hold*: rapidly moves forwards/backwards through radio frequencies with a strong signal (page 10) or rapidly skips to next/previous CD tracks (page 12).

Tune/MP3

- *Press*: skips to next/previous radio frequency (page 10) or navigates between folders when playing MP3 CDs (page 13).
- *Press and hold*: rapidly moves forwards/backwards through radio frequencies (page 10) or scans forwards/backwards through a CD track (page 12).

Play Mode

- Selects shuffle and repeat CD play modes (page 12).
- Turns TALK RADIO mode on or off for AM or FM (page 11).



CD

- Turns on the CD player (page 12).

Sleep

- Snoozes a sounding alarm (page 16).
- Sets unit to shut off automatically after 10-90 minutes (page 9).

AUX

- Press to hear audio from an external source connected to the AUX IN input (page 19).

Presets

- *Press*: recalls a stored radio station (page 11).
- *Press and hold*: stores a radio station for quick recall (page 11).

Stop/Eject

- *Press once*: stops a playing CD (page 12).
- *Press again*: ejects a stopped CD (page 12).

Play/Pause

- Plays a CD (page 12).
- Pauses a playing CD (page 12).

Time

- Sets clock time (page 6).
- In Alarm Set mode, sets alarm time (page 15).

Alarm Time

- *Press once*: enters alarm time set-up mode (page 15).
- *Press and hold*: enters the set-up menu (page 21).


Alarm On/Off

- Turns alarm on or off (page 16).

Wake To

- *Press and hold*: sets the currently playing radio station or CD track as the alarm sound (page 15).

Reading the display

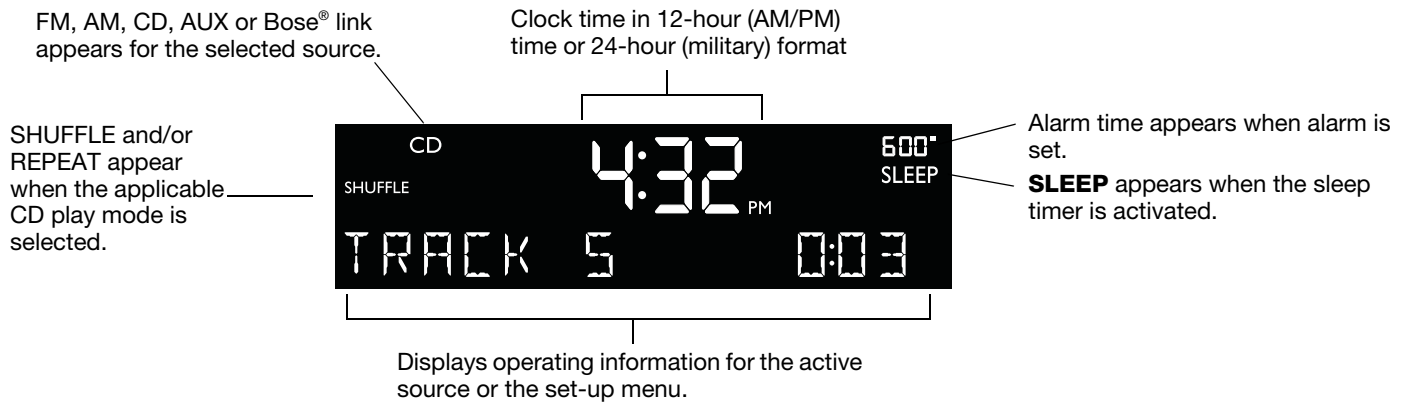

Turning the Wave® music system on and off



Press **On/Off** once to turn the Wave® music system on or off. The Wave® music system turns on to the last source played.

OR



Press any source button to turn the Wave® music system on to that source. Pressing the **AUX** does not turn on an auxiliary source (such as your TV), so turn that on first.

Controlling the volume



Press and hold **Volume ▲** or **Volume ▼** to adjust the volume level. **VOLUME - 0** (silent) to **99** (loud) appears on the display to indicate the level.



Press **Mute** to silence the Wave® music system. Press **Mute** again, or press **Volume ▲** to unmute. To lower the volume before unmuting, press **Volume ▼** while muted.

Note: When the Wave® music system is off, the volume can only be adjusted between 10 and 75.

Setting up automatic shutoff (Sleep)



Press **Sleep** to set the Wave® music system to shut off automatically after a selected period of time.

- After pressing **Sleep**, **SLEEP - 30 MIN** appears on the display and the sleep timer begins counting down. If your Wave® music system is off, press **Sleep** to turn it on and immediately set the sleep time. The last source selected will start playing as the sleep timer counts down.
- While the **SLEEP** setting is displayed, press **Sleep** again to set the sleep timer to 10-90 minutes (in 10-minute increments) or OFF.

Note: While in sleep timer set-up mode, if more than 10 seconds elapses between button presses, the Wave® music system will automatically exit the sleep timer set-up mode.


- To review the remaining sleep time, press **Sleep**.
- To cancel the sleep timer, press **On/Off**.

Turning the radio on




Press **FM/AM** to turn on the radio to the FM or AM station last selected. Press **FM/AM** again to switch between FM and AM.

When the radio is playing, radio station information is displayed. If RDS is enabled (ON) in the system set-up menu (see page 22), RDS information appears in place of the station frequency.

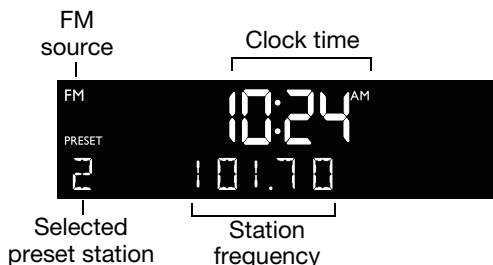

FM display - No RDS information

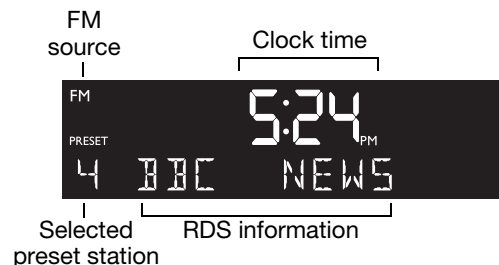

FM display - Active RDS

Note: The Radio Data System (RDS) is a system that transmits useful information, such as station name, programme information and the current time. RDS is used only on FM and RDS information is displayed only if it is included in the FM broadcast signal.


Tuning the radio



Press **FM/AM** to switch between FM and AM.

Display while tuning

When you press **FM/AM**, **Seek/Track** or **Tune/MP3** to tune to a radio station, the frequency appears in the centre of the display while you are tuning.

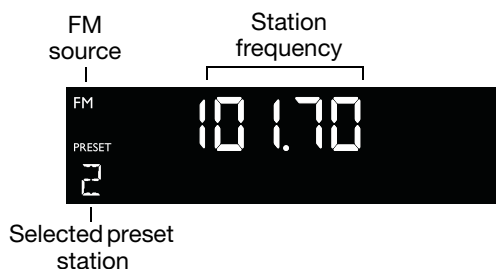

Press **Seek/Track** **◀◀** to find a lower frequency station with a strong signal; press **Seek/Track** **▶▶** to find a higher frequency station with a strong signal.




Press **Tune/MP3** **<** to manually tune to a lower frequency; press **Tune/MP3** **>** to manually tune to a higher frequency.

Press and hold **Tune/MP3** **<** to move rapidly down through the frequency band; press and hold **Tune/MP3** **>** to move rapidly up through the frequency band.

Note: Five seconds after releasing **FM/AM**, **Tune/MP3** or **Seek/Track**, the clock time returns to the centre of the display and the radio frequency appears below it.

Note: If AM reception is weak, rotate your Wave® music system clockwise or anticlockwise to improve AM reception. If FM reception is weak, make sure the power cord is straightened as much as possible. To improve FM reception, you can install an external FM antenna. See "Connecting an external FM antenna" on page 17.

Storing a radio station to memory (Presets)

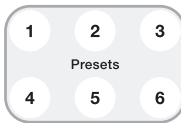

You can store up to six FM and six AM radio stations for quick recall using the **Presets** buttons.

1. Tune to the station you want to save as a preset.
2. Press and hold one of the six **Presets** buttons until you hear a double beep and the preset number and station frequency appear on the display.
3. Press one of the **Presets** buttons to quickly tune to a previously stored FM or AM station.

♪ **Note:** Storing a preset will replace any station previously stored to that preset number.

♪ **Note:** During a power outage, stored presets are saved in a backup memory system.

TALK RADIO mode

Talk radio broadcasts can be greatly affected by either the microphone selection or the boosting of low frequencies by some radio stations. They do so in an attempt to improve speech when heard through conventional radios. In high-quality audio products, this results in sound that is unnatural or bass heavy. By selecting the TALK RADIO mode, your Wave® music system automatically adjusts to compensate for artificially boosted low frequencies.



When the radio is playing, press **Play Mode** twice to change the TALK RADIO mode setting.

When on, **TALK RADIO- ON** is displayed. When off, **TALK RADIO- OFF** is displayed.


♪ **Note:** The TALK RADIO setting is automatically cancelled when you tune to another station, switch to another source or turn your Wave® music system off.

Playing audio compact discs (CDs)




Insert the disc, label side up, into the CD slot below the display. The disc player will automatically pull the disc in and begin playing.

Press **CD** if the CD source is not selected.

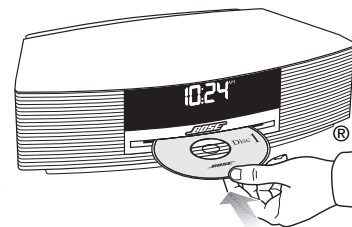

Note: – **NO DISC** – is displayed if you press **CD** when there is no disc in the disc player.

- When an audio CD is playing, CD source information is displayed:

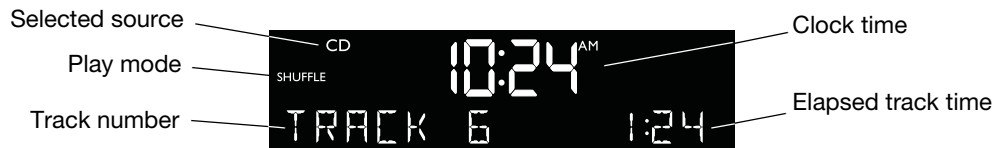

Play / Pause



Press **Play/Pause** to pause a playing CD. The elapsed time flashes while paused. Press **Play/Pause** again to resume play.

Seek / Track



Press **Seek/Track** **⏮** to skip to beginning of the current track; press **Seek/Track** **⏮** twice to skip to the beginning of the previous track; press **Seek/Track** **⏭** to skip to the next track.

Tune/MP3



Press and hold **Tune/MP3** **<** to scan backwards quickly through a track; press and hold **Tune/MP3** **>** to scan forwards quickly through a track.

Stop / Eject



Press **Stop/Eject** to stop a CD. Press **Stop/Eject** again to eject a CD. If a CD is playing, press and hold **Stop/Eject** to stop a CD and eject it.

Note: When you play a stopped CD it will always resume from the place it was stopped.

Note: If you eject a CD but do not remove it from the CD player slot within 10 seconds, the CD player will pull the CD back into the player, reload it and not play it.

CAUTION:

- DO NOT INSERT mini CDs or non-circular CDs into the disc player. These discs may not play properly and could interfere with the system's ability to eject them.
- DO NOT INSERT more than one disc at a time into the disc player.

CD Play Modes



While a CD is playing, you can change the way it is played. Press **Play Mode** repeatedly until the play mode you want is displayed:

- NORMAL PLAY – Plays tracks once in sequential order.
- SHUFFLE DISC – Plays all tracks once in random order.
- SHUFFLE RPT – Repeats all tracks in a random order that changes each time the disc is repeated.
- REPEAT DISC – Repeats the disc from the beginning after the last track is played.
- REPEAT TRACK – Repeats the selected track continuously.

Note: The play mode will return to NORMAL PLAY whenever a CD is inserted.


Playing music file (MP3) CDs

Your Wave® music system can play MP3 music files recorded on CD-R and CD-RW discs. You can easily navigate through your music files using the **Tune/MP3** and **Seek/Track** remote control buttons.


♪ **Note:** MP3 is a music compression technology that reduces a song's file size without noticeable effect in the quality of the sound. Through compression algorithms, the MP3 format makes it easy for you to store many times the number of songs you would find on a conventional audio CD. In fact, an MP3 CD can contain as much music as ten standard audio CDs on just one disc, which can then be organised into folders on a computer before being stored on the disc.

Music files on an MP3 CD are played according to the folder structure on the disc. For example:

Folders on CD:

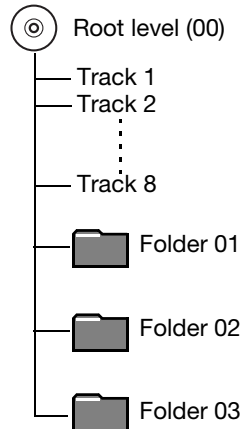

Play order:

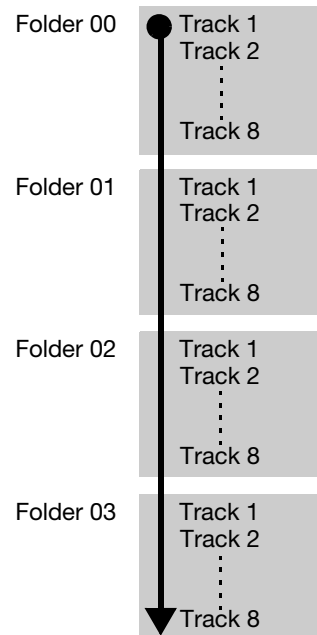

To play, pause, stop or eject an MP3 CD, use the same remote control buttons as for an audio CD. See “Playing audio compact discs (CDs)” on page 12.

The Wave® music system will display artist name and song title information when available on music file CDs.

♪ **Note:** The audio quality of MP3 CDs is dependent on factors such as the encoded bit rate, the sampling rate and the type of encoder used. The Wave® music system supports MP3 CDs encoded at bit rates of 64kbps or higher, and sampling rates of 32kHz or higher. It is recommended that a bit rate of at least 128kbps and a sampling rate of 44.1kHz or better be used.

♪ **Note:** Playback quality of recorded CD-R and CD-RW discs is dependent on the CD recording process and software used to record the disc. An improperly recorded audio CD may cause the system to exhibit unexpected behaviour.

Navigating through music files



Press **Tune/MP3** < to skip to the previous folder; press **Tune/MP3** > to skip to the next folder.



Press **Seek/Track** << to skip to the beginning of the current track; press **Seek/Track** <<< twice to skip to the beginning of the previous track; press **Seek/Track** >>> to skip to the next track.

- When navigating an MP3 CD, folder number and track number are displayed:



Note: The Root level is displayed as folder number 00.

Once the track begins playing, artist name, song title and elapsed track time will return to the display:



Play modes for MP3 CDs



While a music file CD is playing, you can change the way it is played. Press **Play Mode** repeatedly until the play mode you want is displayed:

- NORMAL PLAY – Plays tracks once in sequential order.
- SHUFFLE DISC – Plays all tracks once in random order.
- SHUFFLE FOLDR – Plays all tracks in the selected folder in random order.
- SHUF RPT FLDR – Repeats all tracks in a folder in a random order that changes each time the folder is repeated.
- SHUF RPT DISC – Repeats all tracks on a disc in a random order that changes each time the disc is repeated.
- REPEAT DISC – Repeats all tracks on a disc in order.
- REPEAT FOLDER – Repeats all tracks in a folder in order.
- REPEAT TRACK – Repeats the selected track continuously.


Note: The play mode will return to NORMAL PLAY whenever a CD is inserted.

Setting the alarm

Waking to a radio station or CD

1. Turn on your Wave® music system and select the radio station or CD track you would like to wake to.
2. Adjust the volume to the level you would like to wake to.
3. Press and hold **Wake To** until you hear a double beep. Your alarm is now set to wake you to your chosen radio station or CD track.

Wake To

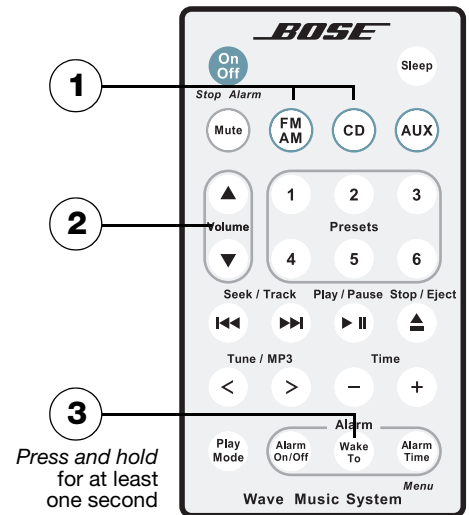

Setting the alarm time

Alarm Time

1. Press **Alarm Time** to enter the alarm time set-up mode. The alarm time is displayed in the centre of the display and flashes in the upper right corner.

Time




2. Press **Time -** or **Time +** to set your wake-up time.

Alarm Time

3. Press **Alarm Time** again. Your alarm time is now set.

Note: While in alarm time set-up mode, if more than 10 seconds elapses between button presses, the Wave® music system will automatically exit the alarm time set-up mode.

Note: To confirm the alarm time and Wake To settings, press **Alarm Time**. Alarm time and Wake To settings will be displayed for 10 seconds.

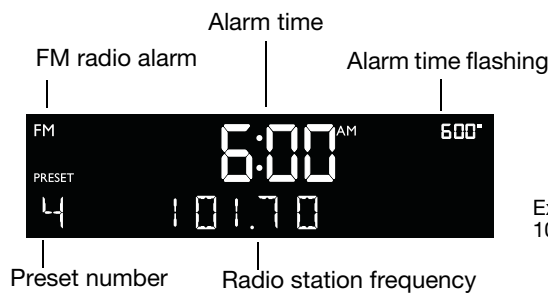

Example: alarm is set to play radio station Preset 4, 101.70 FM, at 6:00 A.M.

Using the alarm



Stop Alarm

Stopping a sounding alarm

Press **On/Off (Stop Alarm)** to stop a sounding alarm and reset it for the next day.



Turning alarm on and off

Press **Alarm On/Off** to turn alarm on or off. It's on when the alarm time is displayed in the upper right-hand corner. It's off when the alarm time is not visible in the upper right-hand corner of the display.




Snoozing an alarm

Press **Sleep** to snooze a sounding alarm.

During the snooze time, **SNOOZE** is displayed. After the snooze time expires, the alarm sounds again. Pressing **Sleep** again will silence the alarm again for another 10 minutes. (Factory default is 10 minutes for the snooze time. See "Adjusting the snooze time" on page 22.)

Rear panel input/outputs

The rear panel of your Wave® music system provides connections for external equipment.

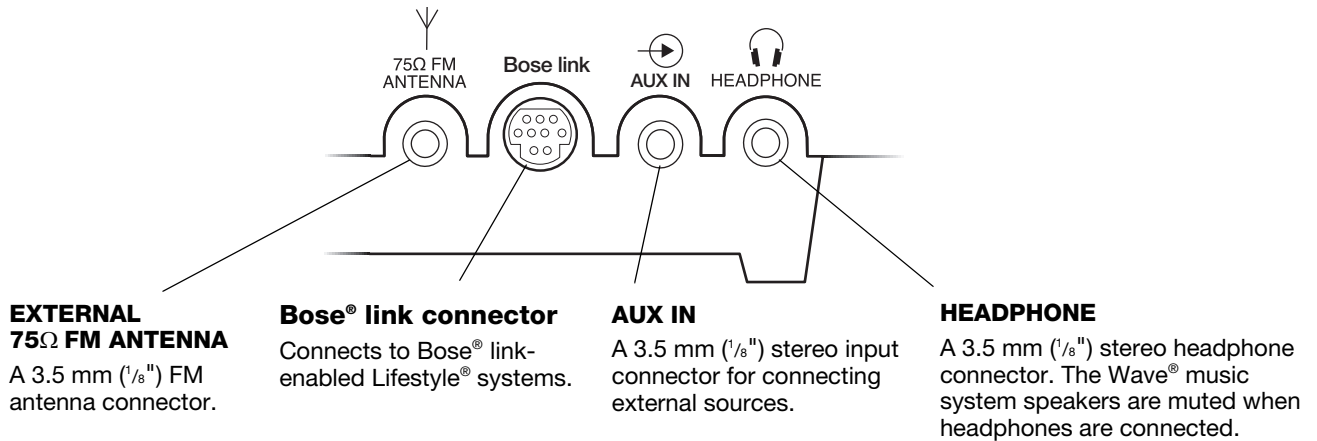


Connecting an external FM antenna

The Wave® music system power cord includes a built-in FM antenna. If, after adjusting the position of the power cord, you still experience poor reception, you may connect the system to an external roof or cable antenna or an FM dipole antenna. An adapter is included for connecting the system to an external roof or cable antenna, and an external FM dipole antenna can be ordered through Bose® Customer Service. See the phone numbers listed inside the back cover of this guide.

To connect an external roof or cable antenna using the antenna adapter:


- Plug the 3.5 mm (1/8") plug of the antenna adapter into the **75Ω FM ANTENNA** connector on the rear panel of your Wave® music system.
- Connect the other end of the adapter to your external roof or cable antenna cable.

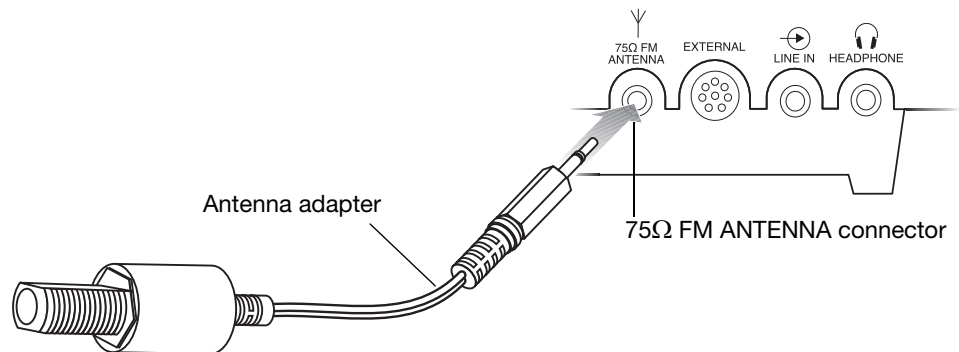

Note: Connecting the system to an external roof or cable antenna disables the built-in antenna, and the FM signal will only be received through the external antenna. Disconnecting the external antenna reactivates the built-in antenna

To connect an external FM antenna:

- Plug the 3.5 mm (1/8") plug of the FM antenna into the **75Ω FM ANTENNA** connector on the rear panel of your Wave® music system.
- Extend the ends of the antenna to establish optimum FM reception.
- Extend the ends of the antenna as far from the unit and other external equipment as possible to establish optimum reception.

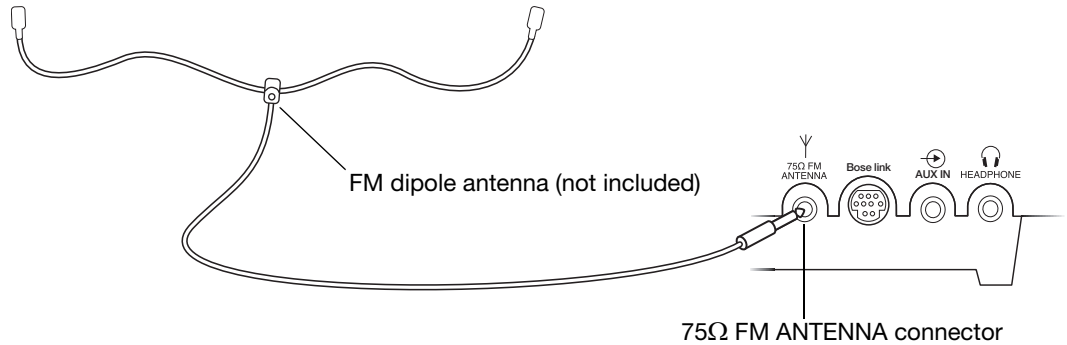

Using headphones

For private listening, connect headphones to the headphone connector on the rear panel of the Wave® music system.

- The speakers are automatically muted when you plug in your headphones.

CAUTION: Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.


Note: The speakers will automatically unmute when headphones are disconnected from the Wave® music system. Because headphone volume levels may vary from speaker volume levels, be sure to lower the volume of the Wave® music system before connecting or disconnecting headphones.

Note: If an alarm sounds while using headphones, it will sound through the Wave® music system speakers.



To change the volume level of headphones

Press **Volume ▲** or **▼** to adjust the listening level of your headphones.

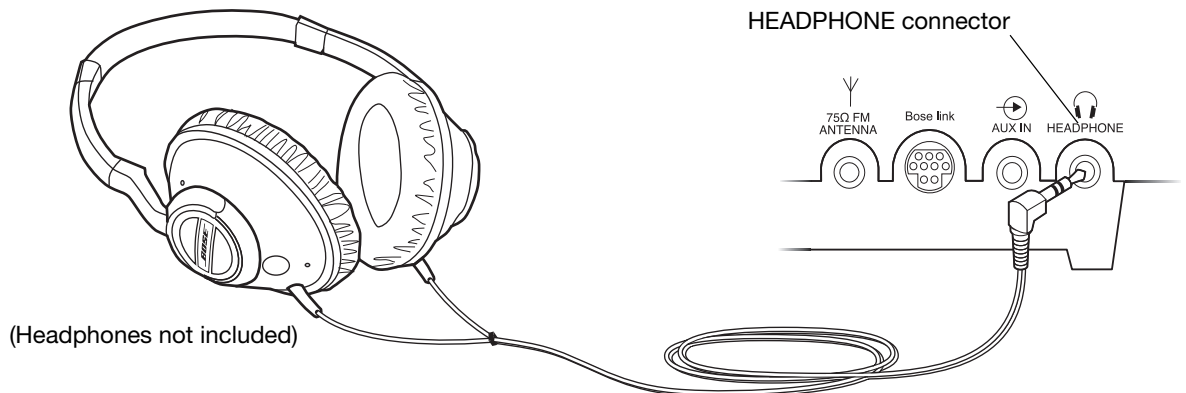


Using your Wave® music system with other audio equipment

When using a TV, VCR, computer, video game or cassette tape player, you can enhance your listening experience by playing the audio device through your Wave® music system.

Connecting an audio device to your Wave® music system, requires one of the following cables:

- Male-to-male 3.5 mm (1/8") stereo cable
- Dual RCA male to 3.5 mm (1/8") male stereo cable

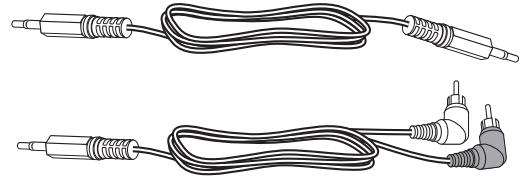

To obtain the correct cable, contact Bose® Customer Service or visit a local electronics store. See the phone numbers listed inside the back cover of this guide.

To connect an audio device, such as your TV, to your Wave® music system:

1. Connect one end of the stereo cable to the output of the audio device.
2. Connect the other end of the cable to the **AUX IN** connector on the rear panel of your Wave® music system.
3. Turn on your Wave® music system and the audio device.




4. Press **AUX**.



5. Press and hold **Volume ▲** or **▼** to adjust the listening level.

Note: If the volume level of your Wave® music system cannot be adjusted high enough, try to increase the volume level of the connected audio device.

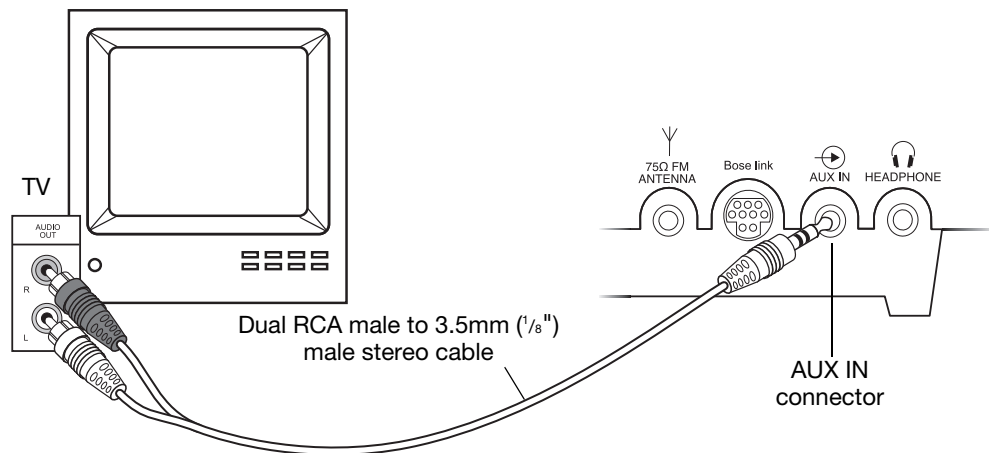

Connecting your Wave® music system to a Lifestyle® system

You can use your Wave® music system as a multi-room expansion speaker system for a Bose® link-enabled Lifestyle® home entertainment system. Your Wave® music system was set up at the factory for room B. To change this setting, see “Setting the room code” on page 24.



 

Contact Bose® Customer Service to obtain the required cables and instructions. See the phone numbers listed inside the back cover of this guide.

Personalising Your Wave® Music System

Factory defaults have been set to satisfy most owners.
However, if you wish to adjust the system settings see
the instructions on pages 21 to 25.

The set-up menu

The set-up menu allows you to customise the operation of the Wave® music system.





- 
1. Press and hold **Alarm Time (Menu)** until **-SET-UP MENU-** is displayed.
- 
2. Press **Tune/MP3 >** until the menu item you want to change is displayed.
- 
3. Press **Time -** or **Time +** to change the value or selection.
- 
4. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.

Wave® Music System Set-up Menu

System Setting	Menu Item	Factory Setting	Choices	Description
Snooze Control	SNOOZE-	10 MIN	10 MIN, 20 MIN, 30 MIN, 40 MIN, 50 MIN, 60 MIN	Determines the snooze time.
Radio Data System (RDS) information	RDS-	ON	OFF, ON	Enables (ON) or disables (OFF) the system to display RDS information.
Continuous Play	CONT PLAY-	NO	NO, AUX, FM, AM	Determines which source will automatically play after a CD ends.
Clock Time Format	TIME-	12 HOUR	12-HOUR, 24-HOUR	Sets the clock display for 12-hour (AM/PM) or 24-hour (military) time.
Display High Brightness Level	BRIGHT HI-	12	8-15	Sets the display brightness level when the unit detects high ambient light conditions.
Display Low Brightness Level	BRIGHT LO-	4	1-8	Sets the display brightness level when the unit detects low ambient light conditions.
Room Code	ROOM-	B _ _ _ -	B _ _ _ -, C _ _ - , D _ _ - , E _ _ - , F _ _ - , G _ _ - , H _ - - , I - - - , J - - - , K - - - , L - - - , M - - - , N - - - , O - - -	Sets the room code for your Wave® music system when it is connected to your Lifestyle® system through a Bose® link network. The dashes following the room letter indicate how the microswitches should be set on the Lifestyle® remote control.
Low-power Mode	LOW POWER-	OFF	OFF, ON	Enables (ON) or disables (OFF) the low-power mode. The low-power mode causes the system to use less energy after you turn it off.
System Reset	RESET ALL-	NO	NO, YES	Restores the Wave® music system to factory settings.





Adjusting the snooze time

This setting determines the duration of time the system remains silent when the snooze function is activated.

-  **1.** Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
-  **2.** Press **Tune/MP3 >** once until **SNOOZE- 10 MIN** is displayed.
-  **3.** Press **Time -** or **Time +** to change the snooze time to 10-60 minutes (in 10-minute increments).
-  **4.** Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.



 

Changing the Radio Data System (RDS) information setting

This setting enables or disables your system to display RDS information. The RDS is a system that transmits useful information, such as station name, programme information and the current time. RDS is used only on FM and RDS information is displayed only if it is included in the FM broadcast signal.

-  **1.** Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
-  **2.** Press **Tune/MP3 >** twice until **RDS- ON** is displayed.
-  **3.** Press **Time -** or **Time +** to change **RDS- ON** to **RDS- OFF**.
-  **4.** Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.





Selecting a music source to automatically play after a CD ends

Your Wave® music system has a continuous play feature. When a CD stops playing, you can programme another source to automatically start playing.

 - 
1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 
2. Press **Tune/MP3 >** three times until **CONT PLAY-** is displayed.
- 
3. Press **Time -** or **Time +** to select FM, AM or AUX.
- 
4. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.







Changing the clock time format

You can choose to have the display show the time in 12-hour (AM/PM) or 24-hour (military) time.

- 
1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 
2. Press **Tune/MP3 >** four times until **TIME-** is displayed.
- 
3. Press **Time -** or **Time +** to select **12 HOUR** or **24 HOUR**.
- 
4. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.

Adjusting the display brightness





The brightness level of the display automatically adjusts itself for low and high ambient light conditions. This feature brightens the display for better visibility in high ambient light conditions and dims the display making it less intrusive in low ambient light conditions. High and low brightness settings can be set independently.

- 
1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 
2. Press **Tune/MP3 >** five times until **BRIGHT HI-** is displayed.
- 
3. Press **Time -** or **Time +** to set the high display brightness level to a value from 8-15.
- 
4. Press **Tune/MP3 >** once until **BRIGHT LO-** is displayed.
- 
5. Press **Time -** or **Time +** to set the low display brightness level from 1-8.
- 
6. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.

Setting the room code

Your Wave® music system comes from the factory ready to operate as a second room (room code B) when connected to a Bose® link enabled Lifestyle® system. If you want to use your Wave® music system with your Lifestyle® system beyond a second room you will need to change the room code to match that of the remote control you are using for that room.


Refer to your Lifestyle® system operating guide for more information on room codes.


- 
1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 
2. Press **Tune/MP3 >** seven times until **ROOM- B _ _ _ -** is displayed. The dashes following the room letter indicate how the microswitches should be set on the Lifestyle® remote control. See your Lifestyle® system operating guide for details.
- 
3. Press **Time -** or **Time +** to select a room code other than room B.
- 
4. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.


Enabling the low-power mode


Your Wave® music system has a low-power mode which causes the system to use less energy after you turn it off. If the low-power mode is enabled, the display automatically turns off after 30 minutes. Just before the display goes blank, **LOW POWER- ON** is displayed.

In the low-power mode, the clock still runs normally, presets are maintained and if an alarm is set, the system turns on at the programmed alarm time. While in the low-power mode, pressing FM/AM, CD, AUX or Preset 1 to 6 turns the system ON in the normal way. Pressing any other remote key, or one that does not turn the system on, lights up the display for another 30 minutes and then turns it off again.

- 

1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 


2. Press **Tune/MP3 >** eight times until **LOW POWER- OFF** is displayed.
- 


3. Press **Time -** or **Time +** to change **LOW POWER- OFF** to **LOW POWER- ON**.
- 


4. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.


Performing a system reset

If you wish, you can restore your Wave® music system to the original factory settings.

- 

1. Press and hold **Alarm Time (Menu)** until **-SETUP MENU-** is displayed.
- 

2. Press **Tune/MP3 >** nine times until **RESET ALL- NO** is displayed.
- 

3. Press **Time +** to change **RESET ALL- NO** to **RESET ALL- YES**.
4. When **PRESS 2 TO CONFIRM** appears on the display, press **Presets** button **2**. When the reset is complete, **DEFAULTS RESET** is displayed.
- 

5. Press **Alarm Time (Menu)** to exit the set-up menu or wait 10 seconds for the set-up menu to end automatically.

Cleaning

Use only a soft dry cloth to clean the enclosure of your Wave® music system. If necessary, you may use a soft-bristled attachment to gently vacuum the front of the enclosure. Do not use any liquid cleaning solutions, solvents, chemicals, alcohol, ammonia or abrasives.

⚠ CAUTION: Do not allow liquids to spill into any openings in the enclosure. If liquids get into the unit, turn it off immediately. Call Bose® Customer Support as soon as possible to arrange for service. See the list of phone numbers inside the back cover.


Replacing the remote control battery

⚠ WARNING: Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 212°F (100°C) or incinerate. Dispose of a used battery promptly. Replace only with a battery of the correct type and model number.


⚠ CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba or Shun Wo CR2032 or DL2032, 3-volt Lithium battery.

To replace the remote battery:

1. Place the remote face down on a flat surface.
2. Using your finger, push the tab lock to the side as shown and hold. Slide the battery compartment open.

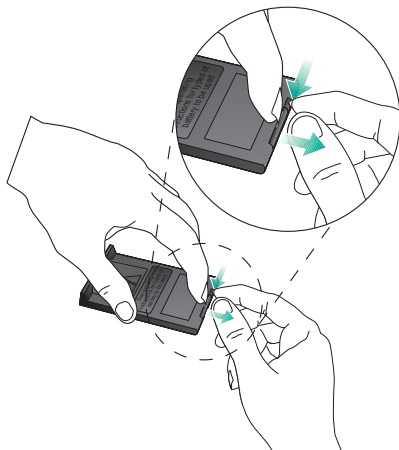

3. Remove the old battery and install the new one with the plus (+) symbol facing up.

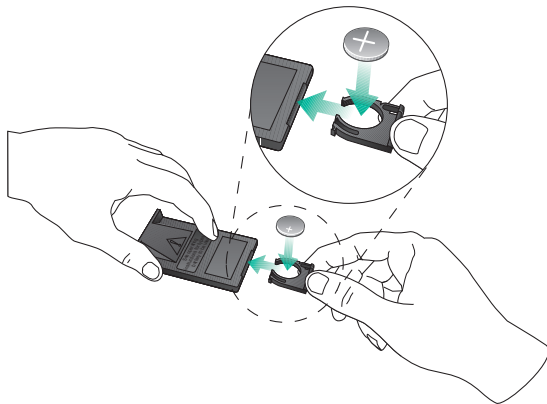

4. Gently slide the battery compartment closed. It locks automatically.

Troubleshooting

Problem	What to do
System does not function	<ul style="list-style-type: none"> • Make sure the power cord is fully plugged into an operating electrical outlet. • Press On/Off to see if the display lights.
No sound	<ul style="list-style-type: none"> • Turn the volume up. • Press Mute. • Eject the CD and reload it. • Check connections for an auxiliary source. • Press AUX to listen to an external source connected to the AUX IN input. • Make sure the external source is turned on. • Disconnect headphones.
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> • Operate the remote control closer to the unit. • Check that the remote control battery is installed with positive (+) polarity facing up. • Replace the remote control battery. • Check for interference from room lighting, sunlight or dust or dirt on lens. • Try the unit in a different location.
AM reception is weak	<ul style="list-style-type: none"> • Adjust the internal antenna by rotating the unit slightly one way and then the other. • Move the unit farther from a TV, refrigerator, fluorescent lamps, halogen lamps, dimmer switches or other electronic equipment that generates electrical noise. • If neither suggestion works, you may be in an area of weak AM signal coverage.
FM reception is weak	<ul style="list-style-type: none"> • Extend the power cord as much as possible. The power cord acts as an FM antenna. • Try an external antenna. Call Bose® Customer Service to order an external FM antenna.
No RDS information is displayed	<ul style="list-style-type: none"> • Check the system set-up menu to make sure RDS- is set to ON. • Make sure you are listening to an FM radio station. • The station may not include RDS information in its broadcast signal. Contact the radio station.
Display window is blank	<ul style="list-style-type: none"> • Press any remote button and check if the display turns on. The low-power mode may be enabled causing the display to power down 30 minutes after you turned the system off. For more information, see “Enabling the low-power mode” on page 25. • If this doesn’t work, call Bose Customer Service for help.
CD does not play	<ul style="list-style-type: none"> • Check that the CD source is selected. The CD icon should appear on the display. If not, press CD. • Check that the CD was loaded label-side up. • Check that the disc surface is clean, If not, try cleaning it. • Check that an audio CD was loaded, not a DVD. • Try another disc.

Customer service

If you lose your remote, additional remotes are available from Bose Customer Service. For additional help in solving problems, contact Bose Customer Service. See the phone numbers listed inside the back cover of this guide.

Limited warranty

Your Bose® Wave® music system is covered by a limited transferable warranty.

Technical information

AC power rating

220V-240V~ 50/60Hz 60W

Dimensions

36.8 cm W x 21.9 cm D x 10.6 cm H (14.6" x 8.6" x 4.2")

Weight

3.9 kg (8.7 lb)

Limited Warranty Policy and Conditions of Sale

Bose Corporation
The Mountain
Framingham, MA 01701

What is covered:

All parts defective in material and workmanship. This limited warranty for the Bose® Wave Music System (“system”) covers the functionality of the system for its normal, intended use as specified in the Owner’s Guide and does not cover a malfunction that has resulted from improper or unreasonable use or maintenance, accident, excess moisture, improper packing, lightning, power surges, or unauthorized tampering, alteration or modification while not under the control of Bose. Bose systems are not designed to be used in every environment, so please review your Owner’s Guide.

WHERE PERMITTED, THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Notwithstanding the above, where applicable, if you qualify as a “consumer” under the Magnuson-Moss Warranty Act, then you may be entitled to any implied warranties allowed by law for the period of the express warranty as set forth below.

For how long:

In countries where the duration of the warranty is not determined by statute, the Bose Limited Warranty lasts two years from the purchase date. For countries where minimum warranty terms are determined by statute, the warranty term is the longer of the statutory period or the term listed above.

What we will do:

We will repair or replace any defective parts within a reasonable period of time and free of charge.

How you can obtain warranty service:

Providing you have a proof of purchase from an authorized dealer, you can return the system to either a Bose Service Agency or directly to Bose. Proof of purchase is not required where it is excluded by statute.

To return a product, please:

1. Properly and carefully pack the product for shipping. If you need a new shipping carton, contact Bose.
2. If you are returning the product directly to Bose, please contact Bose to get a return reference number. Place this number prominently on the outside of the carton.
3. If you are returning the product to a Bose Service Agency, contact the agency for packing and shipping instructions.
4. Label and ship the product to the appropriate location.

Other rights:

EXCLUSIVE REMEDY:

THIS LIMITED WARRANTY IS FULLY TRANSFERABLE PROVIDED THAT THE CURRENT OWNER FURNISHES THE ORIGINAL PROOF OF PURCHASE FROM AN AUTHORIZED BOSE DEALER. THE MAXIMUM LIABILITY OF BOSE SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. SOME PLACES DO NOT ALLOW LIMITATIONS ON THE EXCLUSION OR LIMITATION OF RELIEF, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES OF THE LIMITATION OF LIABILITY TO SPECIFIED AMOUNTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

OTHER CONDITIONS:

FOR YOUR BENEFIT, WE RECOMMEND THAT YOU RECORD YOUR SERIAL NUMBER(S), FOUND ON THE PRODUCT(S), AND OTHER PURCHASE INFORMATION, AND KEEP IT WITH YOUR PERSONAL RECORDS ALONG WITH PROOF OF PURCHASE. IF NECESSARY, THIS INFORMATION WILL ALLOW US TO BETTER SERVE YOUR NEEDS.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC RIGHTS SUBJECT TO SPECIFIED CONDITIONS. YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH APPLY TO THE PRODUCT YOU HAVE ACQUIRED. THESE LEGAL RIGHTS VARY FROM STATE TO STATE OR COUNTRY TO COUNTRY. SOME PLACES DO NOT ALLOW THE EXCLUSION, RESTRICTION OR MODIFICATION OF CERTAIN IMPLIED RIGHTS OR THEIR EFFECT. IN THOSE SITUATIONS THIS LIMITED WARRANTY WILL ONLY APPLY TO THE EXTENT THAT THE APPLICABLE LAW ALLOWS. OTHER LAWS PROVIDE YOU WITH A STATUTORY CLAIM AGAINST THE SELLER.

The laws of your state or country may provide you with legal claims against the seller or manufacturer of this product. The Limited Warranty does not affect those rights.

Remedies:

The provisions of this limited warranty are in lieu of any other warranties or conditions, except those provided by law. This Limited Warranty does not affect any legal rights provided to you by law and does not preclude any legal remedy you may have under the law.

This Limited Warranty is fully transferable provided that the current owner furnishes the original proof of purchase from an authorized Bose dealer.

This Limited Warranty is void if the label bearing the serial number has been removed or defaced.

A

AC power 5
AC power rating 28
acoustic waveguide 7
alarm volume level 15
alarms, using the 16
AM 10
AM reception 27
AM/PM (12-hour) time 6, 21, 23
ambient light conditions 21, 24
artist name 13
audio CD 12
audio device, connecting 19
audio equipment, other 19
automatic shutoff (Sleep) 9
AUX IN connector 17, 19
auxiliary source 9, 27

B

backup memory 6, 11
battery replacement 26
Bose® link 17, 19, 21, 24
brightness level 21, 24

C

CD 12
CD play mode 12
CD source 12, 27
CD source information 12
CD track 12
CD-R 13
CD-RW 13
cleaning 26
clock display 9
clock set-up mode 6
clock time 6, 9
clock time format 6, 23
clock, setting the 6
computer 19
connecting other equipment 17
connections 27
continuous play 21, 23
customer service 27
customizing operation 21

D

demonstration CD 4, 7
dimensions 28
dimmer switches 27
dipole antenna 17
disc player 12
display 9, 15, 27
display brightness 21, 24
DVD 27

E

electrical noise 27
electrical outlet 27
external equipment 17
external FM antenna 10, 17, 27
external source 17, 27

F

factory settings 7, 21, 25
factory snooze time setting 16
fluorescent lamps 27
FM 10
FM antenna 5, 17, 27
FM reception 5, 10, 18, 27
FM source 10
frequency band 10

H

halogen lamps 27
headphones 17, 18, 27
help in solving problems 27

I

internal antenna 27

L

Lifestyle® systems 17, 19, 21, 24
listening level 18, 19
listening to FM/AM radio 10
location, selecting a 4
low-power mode 25

M

military (24-hour) time 6, 21, 23
MP3 CDs 7, 13, 14
multi-room expansion 19
music files, navigating 14

- N**
no sound 27
- O**
operating information 9
- P**
packaging 4
personalising 21
play mode 12, 14
Playing Compact Discs 12
playing compact discs 12
poor reception 17
power 5
power cord 4, 5, 10, 17, 27
power outage 6, 11
preset number 11
presets 11
press and hold operations 8
- Q**
quick recall 11
- R**
radio alarm 15
Radio Data System 22
radio frequency 10
radio station 10, 11
rapid adjustment 6
RDS 22
rear panel 17, 18, 19
refrigerator 27
remote control 8
remote control battery 26, 27
remote control buttons 13
restore audio 8
room code, setting 21, 24
- S**
scan through a track 12
second room 24
setting alarm 15
set-up menu 21, 24
skip 12, 14
sleep timer set-up mode 9
snooze 16
snooze control 21
snooze time 16, 22
song title information 13
sounding alarm 16
station frequency 10, 11
stereo cable 19
stereo headphone connector 17
stereo input connector 17
stopping a sounding alarm 16
stored presets 11
storing a radio station 11
system operation 7
system reset 25
system settings 7, 9, 21, 22, 24, 25
system set-up mode 25
- T**
talk radio broadcasts 11
TALK RADIO mode 11
tapered waveguide 7
technical information 28
time increment 22
track number 12
troubleshooting 27
tuning the radio 10
turning alarm on and off 16
turning the radio on 10
TV 19, 27
- U**
unpacking 4
- V**
VCR 19
video game 19
volume level 9, 19, 27
- W**
wake to a CD track, setting 15
wake to a FM/AM radio, setting 15
wake-up time 15
warranty 28
waveguide speaker technology 7
weak AM reception 27
weak FM reception 27
weak reception 10
weight 28

USA Customer Support

Bose Corporation, The Mountain
Framingham, MA 01701-9168
1-800-367-4008

USA Customer Service

Bose Corporation, 1 New York Ave.
Framingham, MA 01701-9168
1-508-766-1900

Canada Customer Support

Bose Ltd., 1-35 East Beaver Creek Rd.
Richmond Hill, Ontario L4B 1B3
1-800-465-2673

European Office

Bose Products B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Australia

Bose Pty Limited,
Unit 3, 2 Holker Street,
Newington NSW, 2127
TEL +61 (0)2 8737 9999
FAX +61 (0)2 8737 9924

Deutschland

Postfach 1468
48504 Nordhorn
TEL 05921 3030 123
FAX 05921-724250

Bose AG
Hauptstraße 134
CH-4450 Sissach
TEL 061 975 77 33
FAX 061 975 77 44

Bose Ges.m.b.H
Wienerbergstraße 7
A-1100 Wien
TEL 01 604 043 40
FAX 01 604 043 423

France

Bose S.A.S
12 rue de Témara
F-78100 ST. GERMAIN-EN-LAYE
France
TEL 0820 820 995
FAX 01 30 61 63 88

**United Kingdom
Customer Support**

Freepost EX 151
Exeter EX1 1ZY
TEL 0800 614 293
FAX 0870 240 2013

Poland

Bose Sp. z o.o.
ul. Woloska 12
02-675 Warszawa, Poland
TEL (48-22) 852-2928
FAX (48-22) 852-2927

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Bose China

Bose Electronics (Shanghai Co., Ltd)
2203-2205 22F, West Gate Tower
1038 West Nanjing Road
MeiLongzhen Plaza
Shanghai 200041,
Peoples Republic of China
TEL 86 21 62713800

Bose Hong Kong

Bose Limited
Suite 2410-11 Shell Tower
Times Square
1 Matheson Street
Causeway Bay, Hong Kong
TEL 852 2110 3330

Bose Taiwan

Worldwide House
Room 905, Floor 9
131 Min Sheng East Road
Section 3
Taipei, Taiwan
TEL 886 2 2514 7676

Bose India

Bose Corporation India Private Limited
4th Floor, Shriram Bhartiya Kala Kendra
1 Copernicus Marg
New Delhi 110 001, India
TEL 91 11 2307 3825 / 26 /27
India Toll Free: 1600 11 2673
Website: www.boseindia.com

Atlas Hi-Fi Pte. Ltd.

68 Orchard Road
#03-19/21 Plaza Singapura
Singapore 238839,
Republic of Singapore
TEL 65-6-339-0966

The Asavasopon Co. Ltd.

50-52 Siphya Road
Mahaprudtharam, Bangrak
Bangkok 10500,
Thailand
TEL 66-2-234-6467

PT Audio Pratama

JL. Lodan Raya No. 1
Block CO/CN
Jakarta 14430,
Indonesia
TEL 62-21-659-8719

CSI Corporation

Seki Building
23, 2-Ga Namsan-Dong
Joong-Gu
Seoul 100-042,
South Korea
TEL 82-2-344-635-114

**Eleksis Marketing
Corporation**

269 Connecticut Street
Greenhills East
Mandaluyong City
Metro Manila 1550,
Philippines
TEL 63-2-724-9566

G&M International LLC

P.O. Box 1229
Dubai, United Arab Emirates
TEL 971-4-2669-000

Sound Imports

Shop 40
The Mall of Rosebank
Cradock Avenue
Rosebank 2196,
South Africa
TEL 27-11-880-1933

World Wide Web

www.bose.com



324804-0010

BOSE[®]
Better sound through research[®]

©2009 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM324804 Rev.00