

BOSE[®]



Wave[®] SoundTouch[™] 
music system




Owner's Guide

Safety Information

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy its advanced features. Please save this owner's guide for future reference.

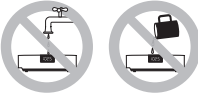WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
-  Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Keep battery away from children. May cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Do not ingest battery, chemical burn hazard. The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think the battery may have been swallowed or placed inside any part of the body seek immediate medical attention.
- Danger of explosion if battery is incorrectly replaced. Replace only with an agency approved (ex. UL) CR2032 or DL2032 3-volt lithium battery.
-  This product contains magnetic material. Please contact your physician if you have any questions on whether this might affect the operation of your implantable medical device.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
-  Contains small parts which may be a choking hazard. Not suitable for children under age 3.
- The Wave® SoundTouch™ music system (the system and SoundTouch™ pedestal combination, or the SoundTouch™ pedestal itself) is not to be used with the under-cabinet/wall bracket available from Bose.

CAUTIONS:

- To prevent electric shock, match the wide blade of the line cord plug to the wide slot of the AC (mains) receptacle. Insert fully.
- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure from the internal laser component. The compact disc player should not be adjusted or repaired by anyone except properly qualified service personnel.

Notes:

- The product label is located on the bottom of the product.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreational vehicles, or on boats.
- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

廢電池請回收


 


Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance.

The temperature range of this product is 32°F (0°C) to 113°F (45°C).

Class 1 laser product

This CD player is classified as a CLASS 1 LASER PRODUCT according to EN/IEC 60825. The CLASS 1 LASER PRODUCT label is located on the bottom of the unit.

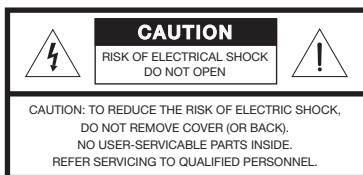

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.



The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3(B)/NMB-3(B)

This Class B digital apparatus complies with Canadian ICES-003.


This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Antenna grounding

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70.

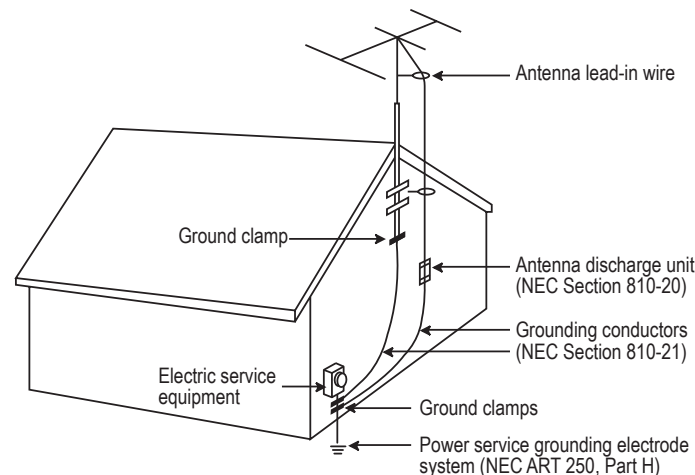

Product data logger

This system features a product data logger that is designed to help Bose better understand product usage and performance over time. The product data logger records certain technical data and usage history, including but not limited to volume levels, on/off data, user settings, source inputs, power output, and setup data. We may use this data to provide you with better service and support on your system and to improve product design in the future. Special equipment is required to read the data stored by the product data logger and such data can only be retrieved by Bose if your system is returned to Bose for service or as returned merchandise. The product data logger does not collect any personally identifiable information about you and does not record title, genre or other information about the media content you access while using your system.

Safety Information

Please complete and retain for your records

Record the serial number of your new Wave® SoundTouch™ music system in the space below. The serial and model numbers can be found on the bottom panel.

Serial number: _____

Model number: _____

Purchase date: _____

We suggest you keep your receipt with this owner's guide.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.

AirPlay, iPad, iPhone, iPod touch, iTunes, Mac, and OS X are trademarks of Apple, Inc., registered in the U.S. and other countries.

Android is a trademark of Google, Inc.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thompson.

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

The distinctive design of the Wave music system is a registered trademark of Bose Corporation in the U.S. and other countries.

©1994-2013 Bose Corporation. No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission.

Introduction

Thank you 6
 The demonstration CD..... 6
 The benefits of research..... 6
 Special features 6
 Carton contents..... 7
 Selecting a location..... 7
 Important setup options..... 7
 Choosing a Wi-Fi® or Ethernet network..... 7
 Network Requirements 7

Setting Up Your Wave® SoundTouch™ Music System

System setup 8
 Setting the clock..... 8
 Adding the system to your Wi-Fi® network..... 9
 Installing the SoundTouch™ app..... 9
 Connecting the system to your home Wi-Fi network 9

Operating Your Wave® SoundTouch™ Music System

Remote control 10
 Touch pad 10
 Reading the display..... 11
 Turning the system on or off..... 11
 Controlling the volume 11
 Setting the Sleep timer 11

Listening to SoundTouch™

Using the SoundTouch™ app..... 12
 Getting help..... 12
 Downloading the app for your mobile device..... 12
 Controlling the system from a different computer..... 12
 About presets..... 12
 About recents..... 12
 Selecting SoundTouch™ 13
 Playing a SoundTouch™ selection 13
 Personalizing SoundTouch™ presets..... 13
 Listening to AirPlay streaming audio 13

Listening to Radio

Selecting the radio band 14
 Listening to FM or AM radio..... 14
 Tuning to an FM/AM station 14
 Storing FM/AM radio station presets 14
 TALK RADIO mode 14

Playing CDs

Playing audio CDs..... 15
 CD Play Modes..... 15
 Playing MP3 CDs..... 15
 Navigating through music files 16
 Play modes for music file CDs 16

Setting and Using the Alarms

Alarm buttons and indicators 17
 Using the Alarm buttons 17
 Alarm status indicators..... 17
 Setting the alarms..... 17
 Using the alarms..... 18
 Turning an alarm on or off 18
 Snoozing an alarm 18
 Stopping a sounding alarm 18

Connecting Other Equipment

System connections 19
 Using the AUX IN connector 20
 Using headphones 20
 Using an external antenna 21

Personalizing Your Wave® SoundTouch™ Music System

The setup menu 22
 Adjusting the snooze time 23
 Turning RDS on or off..... 23
 Selecting the continuous play source 23
 Changing the time format 23
 Adjusting the display brightness 23
 Setting the room code..... 24
 Turning the touch pad on or off..... 24
 Changing the system standby timer 24
 Performing a system reset 24

Maintaining Your Wave® SoundTouch™ Music System

Troubleshooting 25
 Alternate setup method..... 26
 Disable/enable Wi-Fi capability 26
 Power Saving mode 26
 Cleaning..... 27
 Customer service..... 27
 Limited warranty 27
 Technical information 27

Index


Introduction

Thank you ...

Thank you for purchasing the Wave® SoundTouch™ music system; an elegant way to bring high quality sound wirelessly into any room. With the addition of the SoundTouch™ pedestal to the Wave® music system, you can listen to Wi-Fi® music at the touch of a button.


The demonstration CD

We encourage you to listen to the demonstration music CD included in the carton. Simply insert the demonstration disc and your Wave® SoundTouch™ music system will play the CD automatically. For more details on playing CDs see "Playing CDs" on page 15.

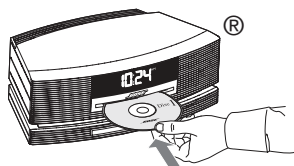

The benefits of research

Over fourteen years of research by Bose Corporation brings you the benefits of award-winning proprietary acoustic waveguide speaker technology. Using this technology, a tube efficiently transfers energy from a small speaker to the outside air over a wide range of low frequencies. And, long waveguides, folded into intricate patterns, fit into products small enough to be placed comfortably in your home. Your Wave® SoundTouch™ music system features dual tapered waveguide speaker technology, connecting two speakers to two 26" tapered waveguides which combine to produce unprecedented instrument timbre from a system this size.

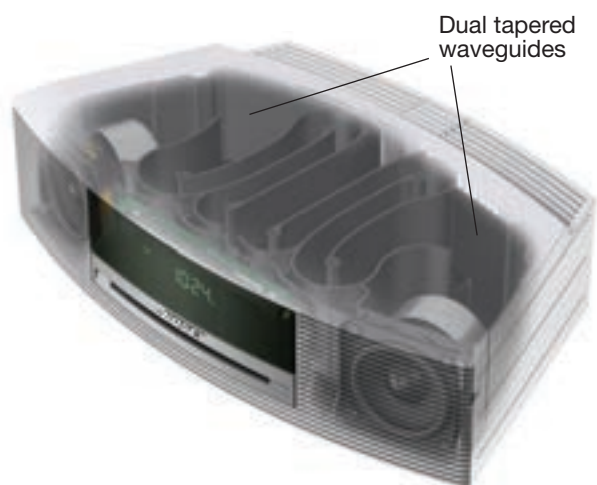


Special features

Listen to SoundTouch™ sources such as Internet radio, music services, and your stored music library



You can easily connect your Wave® SoundTouch™ music system to your home network using the SoundTouch™ app on your computer (Mac or PC). The SoundTouch™ app allows you to assign your music to one of six presets. These presets can be accessed using the Wave SoundTouch™ remote or the SoundTouch™ app on a computer or smart device. See "Adding the system to your Wi-Fi® network" on page 9 and "Using the SoundTouch™ app" on page 12.

Wake to your favorite radio station or CD track

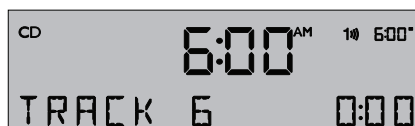

You can set either of the two alarms to wake you to your favorite radio station or CD track. For more details, see "Setting the alarms" on page 17.

Listen to your favorite music file (MP3) CDs



Your Wave® SoundTouch™ music system can play MP3 music files recorded on CD-R and CD-RW discs. You can use the remote control to easily navigate through your MP3 files and play your favorites. For details, see "Playing MP3 CDs" on page 15.

Personalize system operation using the setup menu




System settings were selected at the factory to satisfy most owners of a Wave® SoundTouch™ music system. If you wish to change the settings, see "Personalizing Your Wave® SoundTouch™ Music System" on page 22.

The setup menu allows you to change the following system settings to your liking:


- Snooze time
- RDS information on or off
- Play a radio station automatically after a CD ends
- Clock time format (12- or 24-hour)
- Display brightness level
- Bose link room code
- Touch pad on or off
- Disable the automatic off feature
- Reset to factory settings

Carton contents

Please check the shipping carton for the following items:

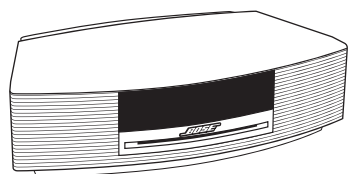

Wave® music system

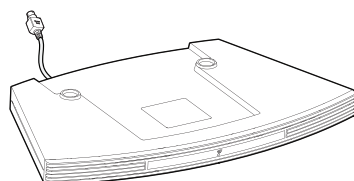

SoundTouch™ pedestal




Remote control
(battery installed)



Demonstration CD



USB cable

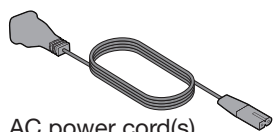

AC power cord(s)

*(The appropriate cord for
your region is provided)*

If any part of the system appears to be damaged, do not attempt to use it. Contact Bose customer service. See the contact information sheet included in the shipping carton.

Be sure to save the carton and packing materials. They provide the safest means for moving or storing the product.

Selecting a location

- To enjoy maximum audio performance, place your Wave® SoundTouch™ music system across the room from where you will be listening.
- Be sure to place the system on a flat, stable surface.
- For best audio performance, place the system within two feet of a wall, and avoid placing directly in a corner.

CAUTIONS:

- Do not place your Wave® SoundTouch™ music system on a metal surface. It could interfere with AM reception.
- Do not place your Wave® SoundTouch™ music system on a heat-sensitive surface. Like all electrical equipment, it generates some heat.
- Do not use your Wave® SoundTouch™ music system in a damp location or any other place where moisture can get inside.

Important setup options

Before you can enjoy listening to SoundTouch™ you must download and run the SoundTouch™ app on a computer to connect the system to your network.

Note: If you have a Windows Media® Player or iTunes® music library stored on a computer, and you would like to listen to it using the SoundTouch™ app, you should install the app on that computer and use it to set up the network connection.

- **If you use a laptop**, follow the setup instructions (page 8) to set up your Wave® SoundTouch™ music system in your chosen location. Then bring your laptop near the system and install and run the SoundTouch™ app (page 9).
- **If you only have a desktop computer**, follow the setup instructions (page 8) to temporarily set up your Wave® SoundTouch™ music system next to your desktop computer. Then install and run the SoundTouch™ app (page 9). After making the network connection, you can disconnect the system from your computer and the AC power outlet, and move it to your chosen location. After connecting the system to power again, it will automatically reconnect to your network.

Choosing a Wi-Fi® or Ethernet network

The SoundTouch™ app gives you the option to connect to your network using Wi-Fi® or an Ethernet cable (not provided).

- **If you choose Wi-Fi**, follow the onscreen instructions to temporarily connect your computer to the SoundTouch™ pedestal using the supplied USB cable.
- **If you choose Ethernet**, follow the onscreen instructions to connect the SoundTouch™ pedestal to your network router using an Ethernet cable.

Network Requirements

To setup this system, you need:

- Broadband Internet connection
- Wireless network (802.11b/g compatible or later, not hidden)
- Computer on your network
- Network name
- Password (if secured)


Note: If your network is hidden, consult the owner's guide that came with your router for instructions on how to make your network visible. After the connection is complete you can hide your network again.

Setting Up Your Wave® SoundTouch™ Music System


System setup

Note: Before you start setting up this system, be sure to read "Important setup options" on page 7.


1. Place the SoundTouch™ pedestal on a flat, stable surface.
2. Carefully set your Wave® music system on top of the SoundTouch™ pedestal.
 - Make sure the rear feet of the Wave® music system fit into the recesses on top of the SoundTouch™ pedestal.
 - Make sure the Wave® music system sits flat and the side edges of both units are aligned.

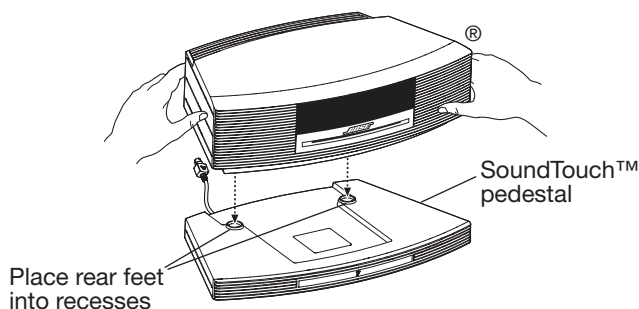

3. Make the connections:
 - A. Insert the SoundTouch™ pedestal cable into the Bose link connector.
 - B. Insert the small plug on the power cord into the connector labeled **AC Power**.
 - C. Plug the other end into a live AC (mains) power outlet.

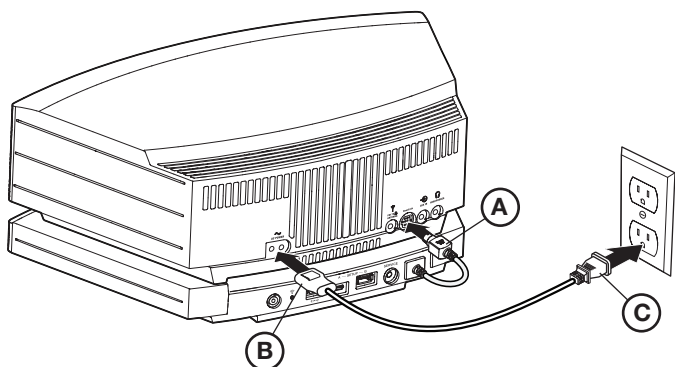

4. Unwind and straighten the power cord to ensure the best FM radio reception. The power cord is used as an antenna.

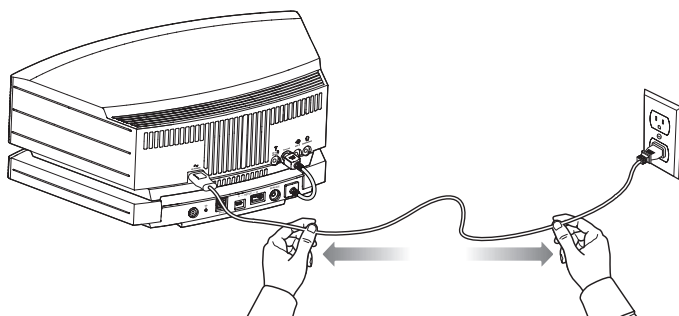


Setting the clock

After plugging in your Wave® SoundTouch™ music system, it is easily operated using the remote control. Just aim the remote at the front panel and press the necessary buttons.

To set the clock:

1. Press and hold either **Time -** or **Time +** for about 1 sec.

Note: Press-and-hold operations require holding the button down for about one second.

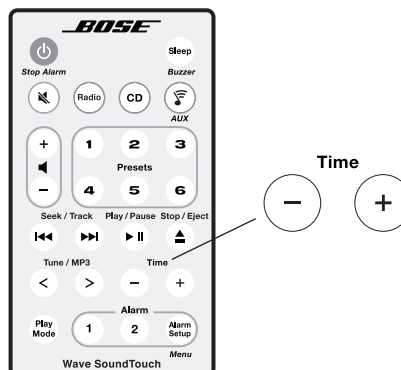

Initially, **HOLD TO SET** appears on the display and then quickly changes to **- CLOCK SET -** as the button is depressed.



2. Release the selected **Time** button.
3. Press **Time -** to adjust the displayed time backward or press **Time +** to adjust the displayed time forward until it matches the current time. You can also press and hold for rapid adjustment.
4. Wait five seconds for the system to exit the clock setup mode automatically.

Note: To change the clock display from 12-hour (AM/PM) time to 24-hour time, see "Changing the time format" on page 23.

Note: If the Wave® SoundTouch™ music system loses power due to a power outage or unplugging the unit to move it, all system settings will be permanently retained. However, the clock time will only be temporarily stored in backup memory for up to 48 hours.

Adding the system to your Wi-Fi® network

Before you can use SoundTouch™ you must install the SoundTouch™ app on a computer that is on your home network. Next, you will use the app to connect the Wave® SoundTouch™ music system to the network. The app guides you through the setup process.

Make sure you follow the instructions on your computer.


Note: If you have already set up SoundTouch™ for another system, just launch the app and click **EXPLORE > SETTINGS > Systems > ADD SYSTEM** to add another system.

Installing the SoundTouch™ app

1. From a computer that is on your Wi-Fi network, open a browser and go to:

http://www.Bose.com/soundtouch_app

Tip: If you want SoundTouch™ to play your iTunes® or Windows Media® Player music library, use the computer where your music library is stored.

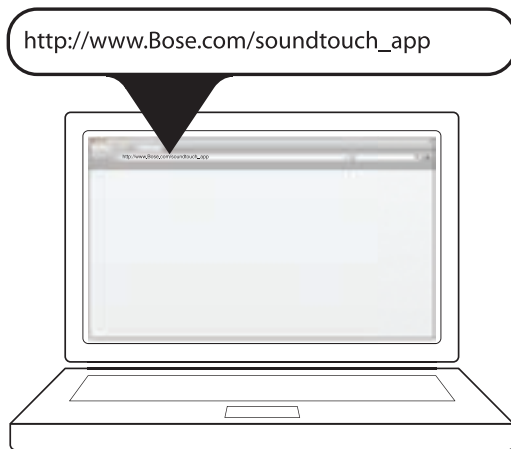


2. Download and install the SoundTouch™ app on your computer. You are now ready to connect the system to your network.

Note: Do not connect any cables to the system until the app instructs you to connect the cables.

Connecting the system to your home Wi-Fi network

1. Make sure you have set up your system by following the steps in "System setup" on page 8.
2. Launch the app by double-clicking the SoundTouch™ icon. The first time the app launches, it guides you through setting up the system on your Wi-Fi network. The app instructs you to connect the system.
3. When prompted by the app, plug the small end of the USB cable into the **SETUP A** connector on the system.

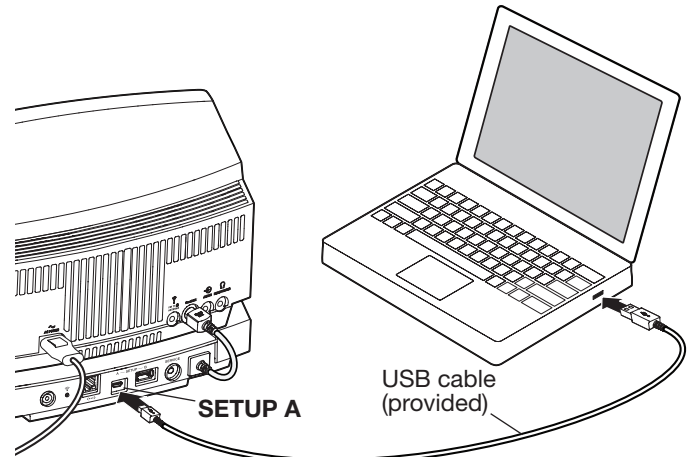




4. Plug the other end of the USB cable into a USB port on your computer. The app detects the system and instructs you to enter your network credentials.
5. Follow the instructions on your computer to complete setup, including creating a SoundTouch™ account, locating your music library, signing in to music services, exploring and personalizing your presets.

Operating Your Wave® SoundTouch™ Music System

Remote control

Your Wave® SoundTouch™ music system is easily operated using the remote control. Just aim the remote at the display and press the buttons. The remote normally works within 20 feet of the display.

 Note: Press-and-hold operations require holding the button down for about one second.

Note: Pressing , , or  automatically turns on the Wave® SoundTouch™ music system to the selected source.

Power On/Off (Stop Alarm)

- Turns the power on or off (page 11).
- Stops a sounding alarm (page 18).

Radio

- Turns on the radio.
- Selects FM or AM (page 14).

Mute

- Press to silence audio (page 11).
- Press again to restore audio.

Volume

- Turns volume up or down (page 11).

Seek/Track

- *Press:* Finds the next radio station with a strong signal (page 14), or skips to next/previous track for the SoundTouch™ (page 13) or CD source (page 15).
- *Press and hold:* Rapidly moves forward/backward through radio frequencies with a strong signal (page 14), or rapidly skips through next/previous tracks for the CD source (page 15).

Tune/MP3

- *Press:* Skips to next/previous radio frequency (page 14), or navigates between folders when playing MP3 CDs (page 15).
- *Press and hold:* Rapidly moves forward/backward through radio frequencies (page 14), or scans forward/backward through a CD (page 15).

Play Mode

- Selects shuffle and repeat CD play modes (page 15).
- Turns TALK RADIO mode on or off for AM or FM (page 14).
- Changes the display of digital radio station information (page 15).



Sleep (Buzzer)

- Snoozes a sounding alarm (page 18).
- Sets unit to shut off automatically after 10-90 minutes (page 11).
- Selects *Buzzer* in Alarm Setup (page 17).

CD

- Turns on the CD player (page 15).

SoundTouch™ (AUX)

- Press to alternately select SoundTouch™ (page 12) or audio from an external source connected to AUX IN (page 20).

Presets

- *Press:* Recalls a stored radio station (page 14) or a SoundTouch™ selection (page 12).
- *Press and hold:* Stores a radio station (page 14) or a SoundTouch™ selection (page 12).

Stop/Eject

- *Press once:* Stops a CD (page 15).
- *Press again:* Ejects a CD (page 15).

Play/Pause

- Plays/pauses a CD (page 15).
- Plays/pauses or plays/stops a SoundTouch™ selection (page 12).

Time

- Sets clock time (page 8).
- When settings alarms, sets the alarm time (page 17).

Alarm Setup (Menu)

- *Press once:* Enters Alarm Setup (page 22).
- *Press and hold:* Enters the system setup menu (page 22).

Alarm 1

- Turns Alarm 1 on or off (page 17).


Alarm 2

- Turns Alarm 2 on or off (page 17).


Touch pad

Your Wave® SoundTouch™ music system has a touch-sensitive control under the top, front, center area of the top panel.

Momentarily placing your hand on the touch pad can turn your Wave® SoundTouch™ music system on or off (page 11), snooze a sounding alarm, and reset it for the next day (page 18).

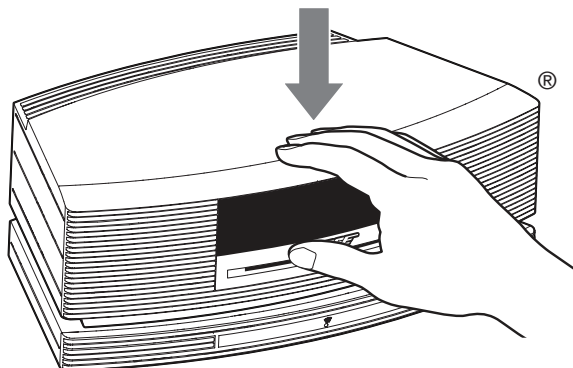

Reading the display

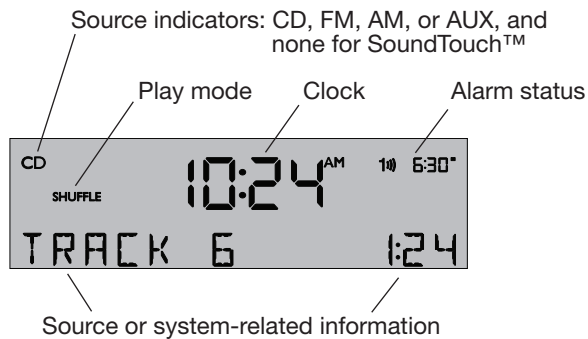


Turning the system on or off

To turn the system on or off (standby):

- Press  on the remote control

or

 - Touch the touch pad.



The last source you were listening to will be active.

Alternatively:

Press any source button to turn the system on to that source.





Note: Selecting **AUX** does not turn on a device connected to AUX IN (such as your TV). Be sure to turn the device on first.

Note: After 24 hours of no button presses, the system automatically switches to standby (off). If the 20-minute system standby timer (page 24) is enabled, the system automatically switches to standby if no audio is played and no buttons are pressed for 20 minutes.

If the system is connected to your network when switching to standby, the connection is maintained while in standby.

Controlling the volume




 
Press and hold  + or  - to adjust the volume level.

VOLUME - 0 (silent) to **99** (loud) appears on the display to indicate the level.



Press to mute the system.

Press again, or press  + to unmute.

While muted, you can press  - to lower the volume before unmuting the system, except when listening to an AirPlay audio stream. Pressing  - while listening to AirPlay unmutes the system and then lowers the volume.

Note: When the Wave® SoundTouch™ music system is off, the volume can only be adjusted between 10 and 75.

Setting the Sleep timer



Press **Sleep** to set the Wave® SoundTouch™ music system to shut off automatically after a selected period of time.

- After pressing **Sleep**, **SLEEP - 30 MIN** (or your last setting) appears on the display and the sleep timer begins counting down. If the system is off, press **Sleep** to turn it on and immediately set the sleep time. The last source selected will start playing as the sleep timer counts down.
- While the **SLEEP** setting is displayed, press **Sleep** again to set the sleep timer to 10-90 minutes (in 10-minute increments) or OFF.

Note: If more than 10 seconds elapses between button presses, the Wave® SoundTouch™ music system automatically exits the sleep timer setup mode.

- To review the remaining sleep time, press **Sleep**.
- To cancel the sleep timer, press **On/Off**.

Listening to SoundTouch™

Using the SoundTouch™ app

The SoundTouch™ app is a software application that enables you to control SoundTouch™ from your computer, smartphone, or tablet. Using the app, your smart device acts as a rich remote for the SoundTouch™ source.

The app enables you to manage your SoundTouch™ settings, explore local and global Internet radio stations, set and change presets, stream music to the system, view what is playing, plus much more.

After you set up the system on your network using the SoundTouch™ app, you are ready to explore streaming music and personalize your presets.

Getting help

If you need more information on using the system, use Help Tips or Online help.

Help Tips

After setup is complete helpful tips appear on the screen, based on the task you are trying to complete. These tips instruct you how to use the system, including how to personalize your presets.

To activate the tips

If you have deactivated tips, follow these instructions to re-activate tips.

1. Launch the SoundTouch™ app and click **EXPLORE > SETTINGS > Help Tips**.
2. Slide the SHOW TIPS slider to ON.

Online help

For information about using SoundTouch™:

1. Click **EXPLORE > HELP** in the app.
2. Browse through the help topics.

Downloading the app for your mobile device

Bose offers a free mobile version of the SoundTouch™ app so you can control the system from your smartphone or tablet.

To install the app for your smartphone or tablet:

- For iOS users: download the SoundTouch™ app from the App Store.
- For Android™ users: download the SoundTouch™ app from the Google Play™ Store.

Controlling the system from a different computer

Once you set up the SoundTouch™ system on your home Wi-Fi® network, you can control the system from any computer on the same network.

1. On the computer where you want to control the system, open a browser and go to:
http://www.bose.com/soundtouch_app
2. Download, install and launch the SoundTouch™ app.
3. Click **SIGN IN TO EXISTING ACCOUNT**.
The sign-in screen appears.
You are ready to sign in to your SoundTouch™ account.

About presets

You can personalize six presets to give you quick access to your favorite streaming music services, stations, playlists, artists, albums or songs from your music library. You can access your music on your Wave® SoundTouch™ system at any time with a simple touch of a button on the Wave® SoundTouch™ system remote control.

Tip: You can also access your presets using the SoundTouch™ app on your computer, smartphone, or tablet.

What you need to know


- You can set presets from the app and the Wave® SoundTouch™ system remote control.
- If the preset source is your iTunes or Windows Media Player music library, ensure the computer storing your music library is on and connected to the same network as the Wave® SoundTouch™ system.
- You cannot set presets from an AirPlay stream or audio device connected to AUX.

About recents

The Recents list displays your 50 most recently-played SoundTouch™ items.

Selecting SoundTouch™

After you have set your presets using the SoundTouch™ app on your computer, you can listen to them by selecting SoundTouch™.

To select SoundTouch™, press  on the remote.

SOUNDTOUCH is displayed until content being streamed through the SoundTouch™ pedestal is available.



Note: When you turn on the system for the first time and select SoundTouch™, content will not be available for several seconds. After that, it will be much faster.



Playing a SoundTouch™ selection

When content is available, the system will play the last SoundTouch item selected unless you press one of the six **Preset** buttons on the remote.



While playing a Preset, the **Preset** number and content are displayed below the clock time.



To skip forward or back through tracks, press (or press and hold) **Seek/Track** forward  or backward .



Note: Some Internet music services do not support skip commands.

Personalizing SoundTouch™ presets

There are two ways to assign SoundTouch™ presets:

- Using the SoundTouch™ app on your computer or mobile device, browse selections in the **Explore** panel and assign new content to your presets.
- Using the SoundTouch™ app on your computer or mobile device, play a new selection. While the new selection is playing, press and hold one of the six **Preset** buttons on the Bose remote until you hear a double tone.




Note: An AirPlay audio stream cannot be stored to a preset.

Listening to AirPlay streaming audio

After connecting the Wave® SoundTouch™ music system to your Wi-Fi® network, it is ready to stream audio from an AirPlay device on the same Wi-Fi network.

1. Start a music app on your AirPlay device.

Tip: Adjust the volume on the device to 75 percent of maximum to ensure optimal volume control from the system.

2. On the device, tap or click  and select the SoundTouch™ system name assigned during setup.
3. Start playing music from the music app.

AIRPLAY is displayed on the front panel of the system followed by information on what is now playing.



Listening to Radio

Selecting the radio band



Press **Radio** to turn on the radio to the station last selected. Press **Radio** as necessary to select FM or AM.

Listening to FM or AM radio

When you select FM radio, Radio Data System (RDS) information for the current station is displayed. This is controlled by the RADIO TEXT setting in the setup menu. To disable RDS and view only the station frequency, change the RADIO TEXT setting to OFF. See "Turning RDS on or off" on page 23.

RDS information displayed (RADIO TEXT- ON):




No RDS information displayed (RADIO TEXT- OFF):




Tuning to an FM/AM station

When you press **Radio**, **Seek/Track**, or **Tune/MP3** to tune to a radio station, the frequency appears in the center of the display while you are tuning.

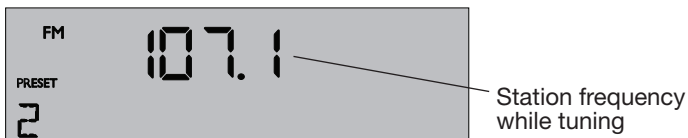

 - Press **Seek/Track** **◀** to find a lower-frequency station with a strong signal;
- Press **Seek/Track** **▶** to find a higher-frequency station with a strong signal.



- Press **Tune/MP3** **<** to manually tune to a lower frequency.
- Press **Tune/MP3** **>** to manually tune to a higher frequency.
- Press and hold **Tune/MP3** **<** to rapidly lower the frequency.
- Press and hold **Tune/MP3** **>** to rapidly increase the frequency.

Note: If AM reception is weak, rotate your Wave® SoundTouch™ music system clockwise or counterclockwise to improve AM reception. If FM reception is weak, make sure the power cord is straightened as much as possible. To improve FM reception, you can install an external FM antenna. See "Using an external antenna" on page 21.

Storing FM/AM radio station presets



You can store up to six FM and six AM radio stations for quick recall using the **Presets** buttons.

1. Tune to the station you want to save as a preset.
2. Press and hold one of the six **Presets** buttons until you hear a double tone and the preset number and station frequency appear on the display.
3. Press one of the **Presets** buttons to quickly tune to a previously stored FM or AM station.

Note: Storing a preset will replace any station previously stored to that preset number.

TALK RADIO mode

Talk radio broadcasts can be greatly affected by either the microphone selection or the boosting of low frequencies by some radio stations. They do so in an attempt to improve speech when heard through conventional radios. In high-quality audio products, this results in sound that is unnatural or bass heavy. By selecting the TALK RADIO mode, your Wave® SoundTouch™ music system automatically adjusts to compensate for artificially boosted low frequencies.




When the radio is playing, press **Play Mode** twice to turn the TALK RADIO mode on (**TALK RADIO- ON**) or off (**TALK RADIO- OFF**).

Note: The TALK RADIO setting is automatically cancelled when you tune to another station, switch to another source, or turn your Wave® SoundTouch™ music system off.


Playing audio CDs

Insert the disc, label side up, into the CD slot below the display. The disc player will automatically pull the disc in and begin playing.

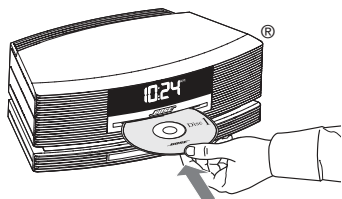

Press **CD** if the CD source is not selected.

- When an audio CD is playing, CD source information is displayed:

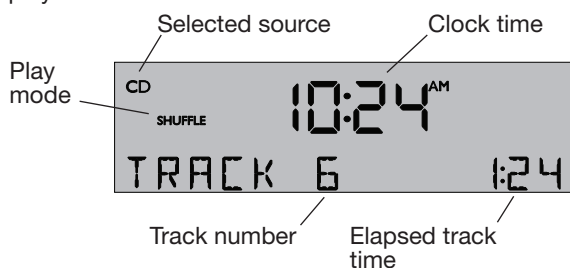

Play / Pause



- Press **Play/Pause** to pause a playing CD. The elapsed time flashes while paused. Press **Play/Pause** again to resume play.

Seek / Track



- Press **Seek/Track** **◀◀** to skip to the beginning of the current track; Press **Seek/Track** **◀◀** again to skip to the beginning of the previous track.
- Press **Seek/Track** **▶▶** to skip to the next track.

Tune / MP3



- Press and hold **Tune/MP3** **<** to scan backward quickly through a track.
- Press **Tune/MP3** **>** to scan forward quickly through a track.

Stop / Eject



- Press **Stop/Eject** to stop a CD. Press **Stop/Eject** again to eject a CD.
- If a CD is playing, press-and-hold **Stop/Eject** to stop a CD and eject it.

Note: When you play a stopped CD it will always resume from the place it was stopped.

Note: If you eject a CD but do not remove it from the CD player slot within 10 seconds, the CD player will pull the CD back into the player and reload it.

CAUTION: DO NOT INSERT mini CDs or non-circular CDs into the disc player. These discs may not play properly and could interfere with the system's ability to eject them.

CD Play Modes



While a CD is playing, you can change the way it is played. Press **Play Mode** repeatedly until the play mode you want is displayed:

- NORMAL PLAY** – Plays tracks once in sequential order.
- SHUFFLE DISC** – Plays all tracks once in random order.
- SHUFFLE RPT CD** – Repeats all tracks in a random order that changes each time the disc is repeated.
- REPEAT DISC** – Repeats the disc from the beginning after the last track is played.
- REPEAT TRACK** – Repeats the selected track continuously.

Note: The play mode will return to **NORMAL PLAY** whenever a CD is inserted.

Playing MP3 CDs


Your Wave® SoundTouch™ music system can play MP3 music files recorded on CD-R and CD-RW discs. You can easily navigate through your music files using the **Tune/MP3** and **Seek/Track** remote control buttons.

Note: MP3 is a music compression technology that reduces a song's file size without noticeable effect in the quality of the sound. Through compression algorithms, the MP3 format makes it easy for you to store many times the number of songs you would find on a conventional audio CD. In fact, an MP3 CD can contain as much music as ten standard audio CDs on just one disc, which can then be organized into folders on a PC before being stored on the disc.


Music files on an MP3 CD are played according to the folder structure on the disc.

For example:

Folders on CD:

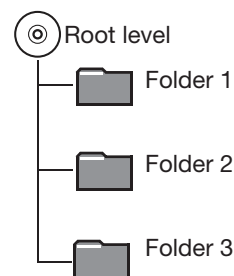

Play order:

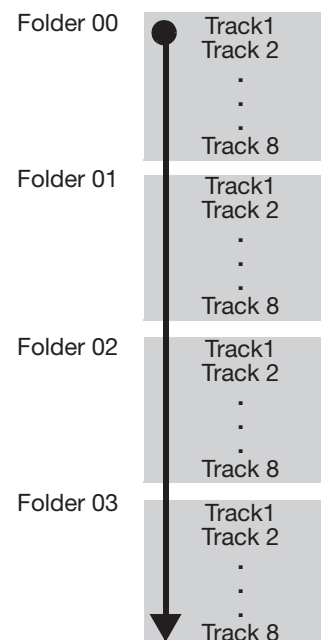

Playing CDs

 
To play, pause, stop or eject an MP3 CD, use the same remote control buttons as for an audio CD. See "Playing audio CDs" on page 15.

The Wave® SoundTouch™ music system will display artist name and song title information when available on music file CDs.

Note: The audio quality of MP3 CDs is dependent on factors such as the encoded bit rate, the sampling rate, and the type of encoder used. The Wave® SoundTouch™ music system supports MP3 CDs encoded at bit rates of 64kbps or higher, and sampling rates of 32kHz or higher. It is recommended that a bit rate of at least 128kbps and a sampling rate of 44.1kHz or better be used.

Note: Playback quality of recorded CD-R and CD-RW discs is dependent on the CD recording process and software used to record the disc. An improperly recorded audio CD may cause the system to exhibit unexpected behavior.

Navigating through music files




• Press **Tune/MP3** < to skip to the previous folder; press **Tune/MP3** > to skip to the next folder.



• Press **Seek/Track** << to skip to the beginning of the current track; Press **Seek/Track** << again to skip to the beginning of the previous track.


• Press **Seek/Track** >> to skip to the next track.

When navigating an MP3 CD, folder number and track number are displayed:

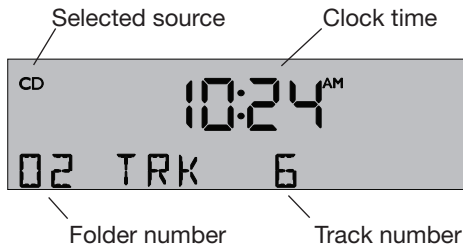

Note: The Root level is displayed as folder number 00.

Once the track begins playing, artist name, song title, and elapsed track time will return to the display:

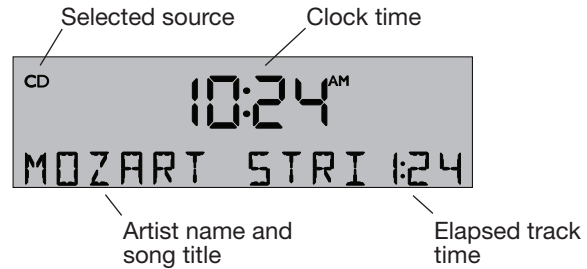

Play modes for music file CDs



While a music file CD is playing, you can change the way it is played. Press **Play Mode** repeatedly until the play mode you want is displayed:

- **NORMAL PLAY** – Plays tracks once in sequential order.
- **SHUFFLE DISC** – Plays all tracks once in random order.
- **SHUFFLE FLDR** – Plays all tracks in the selected folder in random order (MP3 only).
- **SHUF RPT FDR** – Repeats all tracks in a folder in a random order that changes each time the folder is repeated (MP3 only).
- **SHUFF RPT CD** – Repeats all tracks on a disc in a random order that changes each time the disc is repeated.
- **REPEAT DISC** – Repeats all tracks on a disc in order.
- **REPEAT FOLDR** – Repeats all tracks in a folder in order (MP3 only).
- **REPEAT TRACK** – Repeats the selected track continuously.

Note: The play mode will return to **NORMAL PLAY** whenever a CD is inserted.

Alarm buttons and indicators

The Wave® SoundTouch™ music system has two independent alarms, **Alarm 1** and **Alarm 2**.


Each alarm can be set for:

- Time
- Wake-up source: buzzer, radio, or CD
- Volume

Using the Alarm buttons

Using the Alarm buttons on the bottom of the remote you can setup and operate each alarm:

Press to turn Alarm 1 on or off.

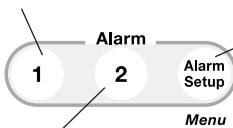


1. Press to activate the Alarm Setup mode and view Alarm 1 settings.
2. Press again to view Alarm 2 settings.
3. Press again to exit the Alarm Setup mode.

Press to turn Alarm 2 on or off.

Alarm status indicators

The upper right-hand corner of the display shows the alarm status indicators if the alarm is set.

Example with Alarm 1 and 2 set:

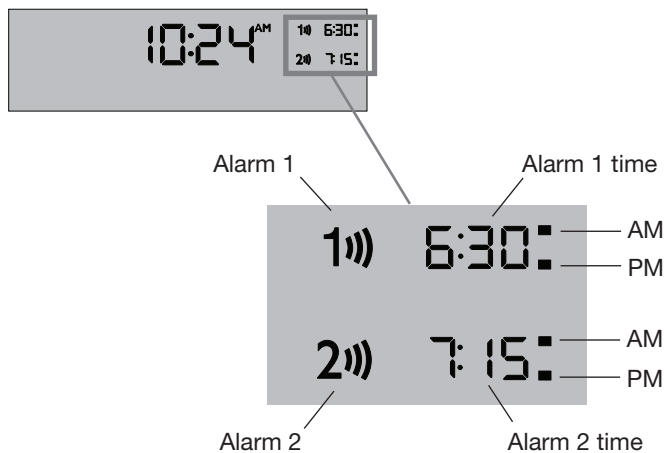

Setting the alarms


You can choose the settings for each alarm by activating the Alarm Setup mode and displaying the settings for the alarm you want to change.

To setup Alarm 1 or 2:

1. Press **Alarm Setup** to activate the Alarm Setup mode.

First, the alarm number and time start flashing (A).

After a moment, the current settings for Alarm 1 are displayed (B).

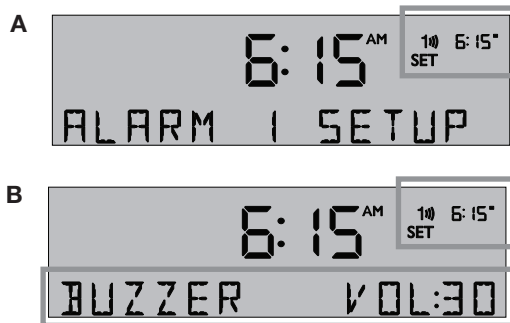

2. Using the **Time** buttons, set the alarm time.



3. Select your wake-up source:

- BUZZER **Sleep** is the factory alarm setting.
Buzzer
- Press **Radio** to choose a radio station.
- Press **CD** to choose a track.

4. Press **Volume** up or down to set the volume level of the selected wake-up source.



5. Press **Alarm Setup** to enter the Alarm 2 setup mode.

Repeat Steps 2-4 to set up Alarm 2.

6. Press **Alarm Setup** again to exit the Alarm Setup mode.

The alarm you set is turned on and the alarm time appears on the display:

Alarm number and time




Setting and Using the Alarms

Using the alarms

Turning an alarm on or off

Press **1** or **2** to turn the selected alarm on or off.


When an alarm is turned on, the alarm number and time appear in the upper right corner of the display.

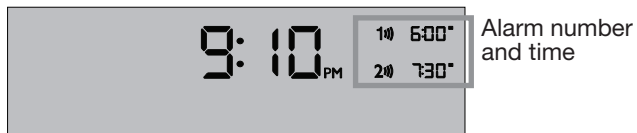

Snoozing an alarm


To snooze a sounding alarm:

Touch the touch pad,

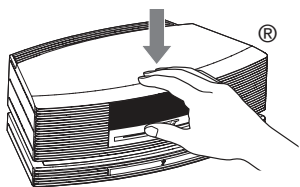

or press **Sleep**.

SNOOZE is displayed for the duration of the selected snooze time and then the alarm sounds again.

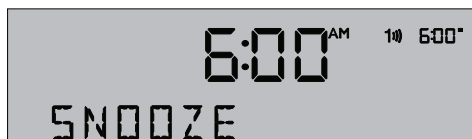

The snooze time is set at the factory to 10 minutes. To change the snooze time to 20, 30, 40, 50, or 60 minutes, see "Adjusting the snooze time" on page 23.

To reset a snoozed alarm for the next day:

After snoozing the alarm, place your hand on the touch pad again and hold it there for at least 2 seconds, or press **Stop Alarm**.



Stopping a sounding alarm


Press **Stop Alarm** to stop a sounding alarm.

Stop Alarm

This also resets the alarm for the next day.

System connections

The rear panel of the Wave® SoundTouch™ music system provides connections for external equipment.

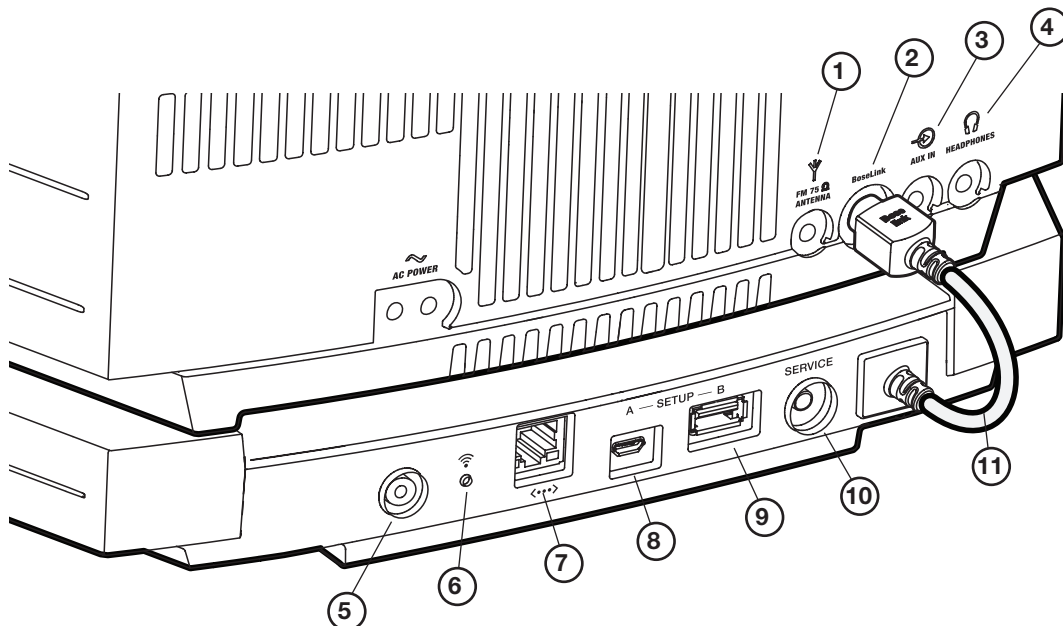

- ① **FM 75Ω ANTENNA**
3.5 mm FM antenna connector. See "Using an external antenna" on page 21.
- ② **Bose link**
Input connector for the SoundTouch™ pedestal.
- ③ **AUX IN**
3.5 mm stereo input connector for external sources. See "Using the AUX IN connector" on page 20.
- ④ **HEADPHONES**
A 3.5 mm stereo headphone connector. See "Using headphones" on page 20.
- ⑤ **Control button**
Places the system in the Power Saving mode (page 26) or initiates an alternate system setup method (page 26).
- ⑥ **Wi-Fi® status indicator:**
 - **Off** – No power to the SoundTouch™ pedestal or the network is disabled
 - **White (blinking fast)** – Attempting to connect to the network
 - **White** – Connected to the network and active
 - **Amber (blinking)** – Failed to connect or network error
 - **Amber (blinking fast)** – Firmware error - Call Bose service
- ⑦ **Ethernet connector**
Used for a wired network connection.
- ⑧ **SETUP A**
A USB Micro-B input used for connecting to a computer for performing system setup.
- ⑨ **SETUP B**
A USB Standard-A input reserved for future use.
- ⑩ **SERVICE**
Used for special service functions. Not for customer use.
- ⑪ **SoundTouch™ pedestal Bose link cable**
Plugs into the Wave® music system Bose link connector. It provides power and control signals to the SoundTouch™ pedestal.

Connecting Other Equipment

Using the AUX IN connector

When using a TV, DVD player, computer, video game or other audio source, you can enhance your listening experience by playing the audio device through your Wave® SoundTouch™ music system.

Connecting an audio device to your Wave® SoundTouch™ music system requires one of the following cables:



Male-to-male 3.5 mm stereo cable




Dual RCA male to 3.5 mm male stereo cable


To obtain the correct cable, contact Bose® customer service or visit a local electronics store. See the contact information sheet included in the shipping carton.

To connect an audio device, such as your TV, to the system:


1. Connect one end of the stereo cable to the output of the audio device.

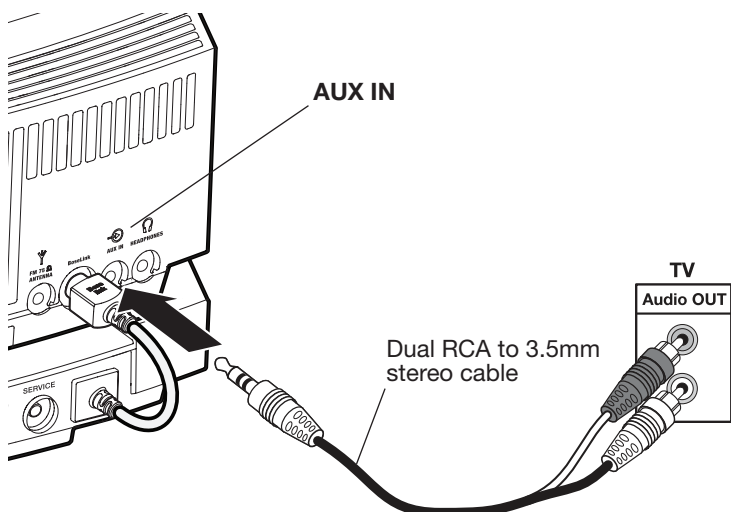

2. Connect the other end of the cable to the **AUX IN** connector on the rear panel of your Wave® SoundTouch™ music system.


3. Press  on the remote control.

The last source you were listening to will be active.

4. Press  once or twice to select the AUX input.

The **AUX** source indicator should be displayed.

Note: If an audio device is plugged into **AUX IN**, pressing  will toggle between SoundTouch™ and the audio device.


5. Press and hold  to adjust the volume.

Note: If the volume level of your Wave® SoundTouch™ music system cannot be adjusted high enough, increase the volume level of the connected audio device.

Using headphones

For private listening, plug the headphones into the headphone connector on the rear panel of the Wave® SoundTouch™ music system.

Note: The system speakers are automatically muted when you plug in your headphones.

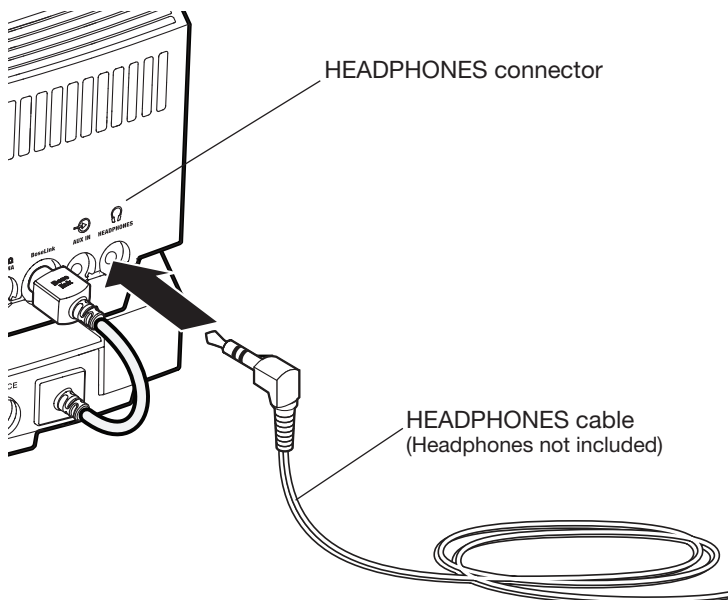


CAUTION: Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Note: The system speakers are automatically muted when you plug in your headphones. The speakers will automatically unmute when you disconnect the headphones. Because headphone volume levels may vary from speaker volume levels, be sure to lower the volume of the Wave® SoundTouch™ music system before connecting or disconnecting headphones.

Note: If an alarm sounds while using headphones, it will sound through the system speakers.


To change the headphones volume:

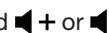Press and hold  to adjust the listening level of your headphones.

Using an external antenna

The Wave® SoundTouch™ music system power cord is used as an antenna for FM radio. If, after adjusting the position of the power cord, you still experience poor reception, you may need to install an external antenna. An external dipole antenna can be ordered through Bose Customer Service. See the phone numbers listed inside the back cover of this guide.

1. Insert the 3.5 mm plug of the FM antenna into the **FM ANTENNA** connector.
2. Extend the ends of the antenna as far from the unit and other external equipment as possible to establish optimum reception.

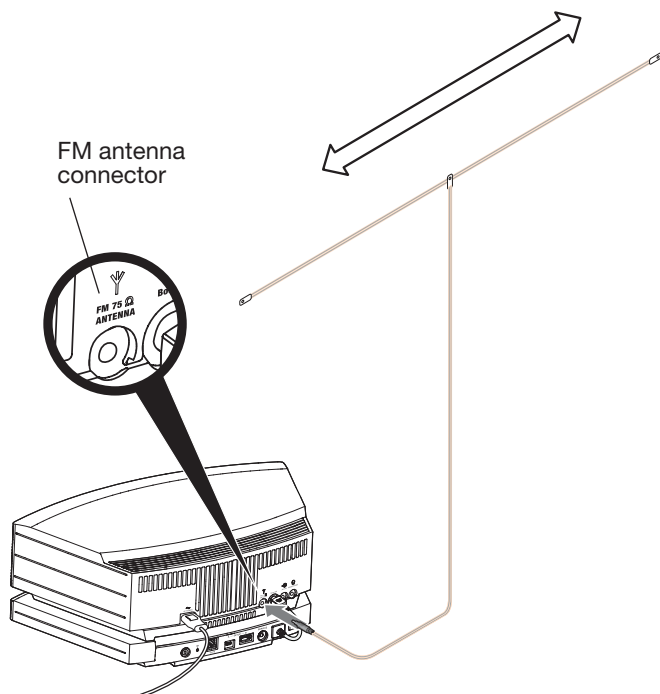

Note: Many FM radio stations transmit a vertically polarized signal as well as, or instead of, a horizontally polarized signal. If the horizontal antenna orientation does not provide good reception, try hanging the antenna in a vertical orientation.

Personalizing Your Wave® SoundTouch™ Music System





System settings were selected at the factory to satisfy most owners of a Wave® SoundTouch™ music system. However, if you wish to adjust the system settings, see the the instructions on the following pages.

The setup menu

The setup menu allows you to customize the operation of the Wave® SoundTouch™ music system.



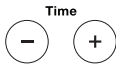


System Setting	Menu Item	Factory Setting	Choices	Description
Snooze Duration	SNOOZE-	10 MIN	10 MIN, 20 MIN, 30 MIN, 40 MIN, 50 MIN, 60 MIN	Determines the snooze time duration.
Radio Data System (RDS) Information	RADIO TEXT-	ON	ON, OFF	Enables (ON) or disables (OFF) the system to display RDS information.
Continuous Play	CONT PLAY-	NO	NO, AUX, FM, AM	Determines which source will automatically play after a CD ends.
Clock Time Format	TIME-	12 HOUR	12-HOUR, 24-HOUR	Sets the clock display for 12-hour (AM/PM) or 24-hour time.
Display High Brightness Level	BRIGHT HI-	10	8-15	Sets the display brightness level when the unit detects high ambient light conditions.
Display Low Brightness Level	BRIGHT LO-	4	1-8	Sets the display brightness level when the unit detects low ambient light conditions.
Room Code (Not applicable when using the SoundTouch™ pedestal.)	ROOM-	B _ _ _ -	B _ _ _ -, C _ _ _ -, D _ _ _ -, E _ _ _ -, F _ _ _ -, G _ _ _ -, H _ _ _ -, I _ _ _ -, J _ _ _ -, K _ _ _ -, L _ _ _ -, M _ _ _ -, N _ _ _ -, O _ _ _ -	Sets the room code for the Wave® SoundTouch™ music system when it is connected to a Bose link network. The dashes following the room letter indicate how the microswitches should be set on a Lifestyle® remote control.
Capacitive touch control	TOUCH PAD-	ON	ON, OFF	Enables (ON) or disables (OFF) the touch pad.
20-minute system standby timer	AUTO OFF-	YES	YES, NO	Enables (YES) or disables (NO) the 20-minute system standby timer. Refer to "Turning the system on or off" on page 11.
System Reset	RESET ALL-	NO	NO, YES	Restores the Wave® SoundTouch™ music system to factory settings.

To change a system setting:

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  until the item you want to change is displayed.
3. Press  to change the value or selection.
4. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.



 


Adjusting the snooze time

This setting determines the duration of time the system remains silent when the snooze function is activated.

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  repeatedly until **SNOOZE- 10 MIN** is displayed.
3. Press   to change the snooze time to 10-60 minutes (in 10-minute increments).
4. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.






Turning RDS on or off

This setting enables or disables your system to display Radio Data System (RDS) information. The RDS is a system that transmits useful information, such as station name, program information and the current time. RDS is used only on FM and is displayed only if it is included in the FM broadcast signal.

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  repeatedly until **RADIO TEXT-** is displayed.
3. Press   to select **OFF** or **ON**.
4. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.



 


Selecting the continuous play source

The Wave® SoundTouch™ music system has a continuous play feature. When a CD stops playing, you can program another source to automatically start playing.

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  repeatedly until **CONT PLAY-** is displayed.
3. Press   to select **AUX, FM, AM,** or **NO**.
4. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.









Changing the time format

You can choose to have the display show the time in 12-hour (AM/PM) or 24-hour time.

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  repeatedly until **TIME-** is displayed.
3. Press   to select **12 HOUR** or **24 HOUR**.
4. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.

Adjusting the display brightness

 The brightness level of the display automatically adjusts itself for low and high ambient light conditions. This feature brightens the display for better visibility in high ambient light conditions and dims the display making it less intrusive in low ambient light conditions. High and low brightness settings can be set independently.

1. Press and hold  until **-SETUP MENU-** is displayed.
2. Press  repeatedly until **BRIGHT HI-** is displayed.
3. Press   to set the high display brightness level to a value from 8-15.
4. Press  again to display **BRIGHT LO-**.
5. Press   to set the low display brightness level from 1-8.
6. Press  to exit the setup menu
or wait 10 seconds for the setup menu to exit automatically.


Personalizing Your Wave® SoundTouch™ Music System


Setting the room code

Note: This setting is not applicable when using the SoundTouch™ pedestal.


The Wave® music system comes from the factory ready to operate as a second room (room code B) when connected to a Bose® link enabled Lifestyle® system. If you want to use your Wave® music system with your Lifestyle® system beyond a second room you will need to change the room code to match that of the remote control you are using for that room.


Refer to your Lifestyle® system owner's guide for more information on room codes.

1. Press and hold  until **-SETUP MENU-** is displayed.

2. Press  repeatedly until **ROOM- B** is displayed.

The dashes following the room letter indicate how the microswitches should be set on the Lifestyle® remote control.


3. Press  to select a room code other than room B.


4. Press  to exit the setup menu


or wait 10 seconds for the setup menu to exit automatically.


Turning the touch pad on or off

If you do not wish to use the touch pad feature you can turn it off.

1. Press and hold  until **-SETUP MENU-** is displayed.

2. Press  repeatedly until **TOUCH PAD-** is displayed.


3. Press  to select **OFF** or **ON**.


4. Press  to exit the setup menu


or wait 10 seconds for the setup menu to exit automatically.

Changing the system standby timer

1. Press and hold  until **-SETUP MENU-** is displayed.

2. Press  repeatedly until **AUTO OFF-** is displayed.

3. Press  to select **NO** or **YES**.

4. Press  to exit the setup menu

or wait 10 seconds for the setup menu to exit automatically.

 
Performing a system reset

If you wish, you can restore your Wave® SoundTouch™ music system to the original factory settings.

Note: This reset function erases all saved presets only in the Wave® music system. To reset the SoundTouch™ pedestal, use the SoundTouch™ app.


1. Press and hold  until **-SETUP MENU-** is displayed.

2. Press  repeatedly until **RESET ALL- NO** is displayed.

3. Press  to change **RESET ALL- NO** to **RESET ALL- YES**.




4. When **PRESS PRESET 3 TO CONFIRM** is displayed, press **Presets 3**.

When the reset is complete, **RESET COMPLETE** is displayed.

5. Press  to exit the setup menu

or wait 10 seconds for the setup menu to exit automatically.

Troubleshooting


Problem	What to do
System does not function	<ul style="list-style-type: none"> • Make sure the power cord is fully plugged into a live AC (mains) power outlet. • Unplug the power cord from the AC wall outlet for 10 seconds and then reconnect it; this will reset the system. • Tap the touch pad on the top of the system to see if the system turns on (page 11).
Unable to complete SoundTouch™ setup	<ul style="list-style-type: none"> • Ensure the SoundTouch™ pedestal is plugged into the Bose link connector and power is on. • Ensure network name and password are correct. • Ensure network service is available and that the Wave® SoundTouch™ music system and computer are on the same network. • Move the Wave® SoundTouch™ music system closer to the wireless router. • Stop other audio or video streaming on your network. • Close the SoundTouch™ app, disconnect the USB cable and restart the setup process. Refer to "Adding the system to your Wi-Fi® network" on page 9.
Intermittent or no audio from SoundTouch™	<ul style="list-style-type: none"> • Move the Wave® SoundTouch™ music system away from possible interference, such as microwave ovens or cordless phones. • Stop other audio or video streaming on your network. • Ensure the SoundTouch™ pedestal is plugged into the Bose link connector and connected to the same network as the computer. • Ensure the system volume is not muted or too low. • Unplug the power cord; reconnect after one minute.
Unable to hear AirPlay	<ul style="list-style-type: none"> • Ensure the system and AirPlay device are connected to the same network. • Ensure the AirPlay device is playing. • On the AirPlay device, check that the Wave system is selected as the output speaker. • Increase the volume of the AirPlay device.
No sound	<ul style="list-style-type: none"> • Turn the volume up. • Press the Mute button . • Eject the CD and reload it. • Press the SoundTouch/AUX button  to listen to SoundTouch™. Make sure the SoundTouch™ pedestal is connected to your Wi-Fi® network. • Press the SoundTouch/AUX button  to listen to an external source connected to the AUX IN. Make sure the external source is turned on and the volume on the external source is turned up. • Disconnect headphones from the system (connecting headphones mutes the speakers).
Poor sound quality	<ul style="list-style-type: none"> • If listening to an AM or FM source, try turning the Talk Radio mode on or off (page 14). • If listening to an external AUX source, make sure you are using a stereo cable and that it is fully inserted.
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> • Operate the remote control closer to the unit. • Check that the remote control battery is installed with positive (+) polarity facing up. • Replace the remote control battery. • Check for interference from fluorescent room lighting, sunlight, or dust or dirt on lens. • Try the unit in a different location.
AM reception is weak	<ul style="list-style-type: none"> • Turn the system slightly one way and then the other to change the direction of the internal AM antenna. • Move the unit farther from a TV, refrigerator, halogen lamps, dimmer switches, or other electronic equipment that generates electrical noise. • If neither suggestion works, you may be in an area of weak AM signal coverage.
FM reception is weak	<ul style="list-style-type: none"> • Extend the power cord as much as possible. The power cord acts as an FM antenna. See page 8. • See "Using an external antenna" on page 21.
CD does not play	<ul style="list-style-type: none"> • Check that the CD source is selected or press CD. The CD icon should appear on the display. • Check that the CD was loaded label-side up. • Check that the disc surface is clean. If not, try cleaning it. • Check that an audio CD was loaded, not a DVD. • Try another disc.

Replacing the remote control battery

WARNING: Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Dispose of a used battery promptly. Replace only with a battery of the correct type and model number.


CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with an agency-approved (e.g. UL) CR2032 or DL2032 3-volt lithium battery.

1. Place the remote face down on a flat surface.
2. Using your finger, push the tab lock to the side as shown and hold. Slide the battery compartment open.

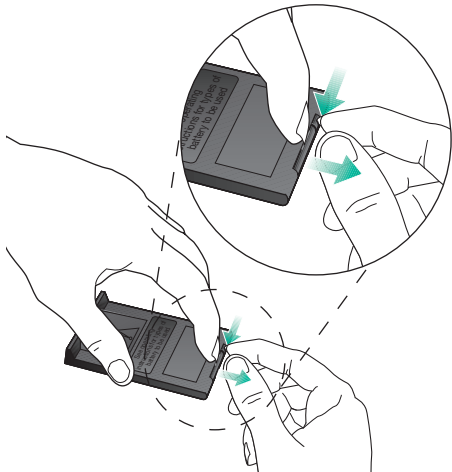

WARNING: Do not ingest battery, chemical burn hazard. The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed it can cause severe internal burns in just two hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think the battery may have been swallowed or placed inside any part of the body seek immediate medical attention.

3. Remove the old battery and install the new one with the plus (+) symbol facing up.

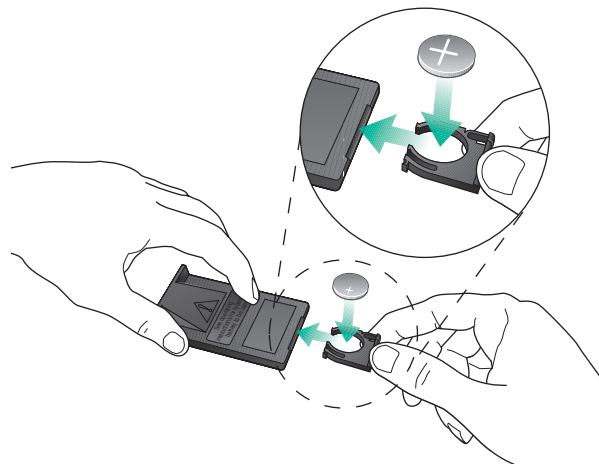

4. Gently slide the battery compartment closed. It locks automatically.

Alternate setup method

Using this method you can set up your Wave® SoundTouch™ music system by first joining its own built-in Wi-Fi® network, and then connecting to your home Wi-Fi network.

Note: Use this method to set up your system as an AirPlay device, only. To access the benefits of SoundTouch™, such as streaming Internet radio and your music services, you must add the system to your home Wi-Fi network using the SoundTouch™ app (see page 9).

1. On the Wave® SoundTouch™ music system remote, press the **Power** button to turn on the system.
2. On the back of the SoundTouch™ pedestal, press and hold the Control button for about two seconds until **ALTERNATE SETUP** is displayed on the front panel.
3. On your smart device, activate Wi-Fi and join the Bose® SoundTouch™ Wi-Fi Network.
4. Open a browser and type: <http://192.168.1.1> in the address field.
The Wi-Fi setup window appears on the screen.
5. Select your home Wi-Fi network from the drop-down list.
6. Enter your password (if required) and tap or click **Connect**.
The SoundTouch™ pedestal attempts to connect to your home Wi-Fi network.
The Wi-Fi indicator on the rear panel of the SoundTouch™ pedestal momentarily blinks white and then turns solid white when connected to the network.
7. On your computer, tablet or smartphone, return to the Wi-Fi control panel and rejoin your home Wi-Fi network.
8. Once the system is on the network, follow these steps to complete setup:
 - A. Download and launch the SoundTouch™ app. See "Installing the SoundTouch™ app" on page 9.
 - B. On the SOUNDTOUCH™ SYSTEM SETUP screen, select this option:

IT IS ALREADY ON MY NETWORK

Disable/enable Wi-Fi capability

The SoundTouch™ pedestal has built-in Wi-Fi capability that enables it to wirelessly connect to your home Wi-Fi network.

To disable Wi-Fi, press and hold the Control button on the back of the SoundTouch™ pedestal for at least eight seconds or until the Wi-Fi status indicator turns off.

To enable Wi-Fi again, turn on the system.

Power Saving mode

The SoundTouch™ pedestal has a low-power standby mode in which it consumes a minimum amount of power. This can be used to reduce the power consumed in your home while you are away.

To place the SoundTouch™ pedestal in the Power saving mode, press and hold the Control button on the back of the SoundTouch™ pedestal for at least eight seconds or until the Wi-Fi status indicator turns off. This also disables the Wi-Fi capability.

To wake up the SoundTouch™ pedestal, quickly press and release the Control button. The Wi-Fi capability is enabled again when any source is selected.

Cleaning

Use only a soft dry cloth to clean your Wave® SoundTouch™ music system. If necessary, you may use a soft-bristled attachment to gently vacuum the front of the enclosure. Do not use any liquid cleaning solutions, solvents, chemicals, alcohol, ammonia, or abrasives.

Do not allow liquids to spill into any openings in the enclosure. If liquids get into the unit, unplug the product immediately. Call Bose Customer Support as soon as possible to arrange for service. See the list of phone numbers inside the back cover.

Customer service

If you lose your remote, additional remotes are available from Bose Customer Service. For additional help in solving problems, contact Bose Customer Service. See the contact information sheet included in the shipping carton.

Limited warranty

Your Bose Wave® SoundTouch™ music system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please complete the information section on the card and mail it to Bose. Failure to do so will not affect your limited warranty rights.

Technical information

AC power rating

120V \sim 50/60Hz 60W max.

Dimensions

14.6" W x 8.6" D x 5.6" H (36.8 cm x 21.9 cm x 14.2 cm)

Weight

8.7 lb (3.9 kg)

SoundTouch™ app compatibility

Microsoft™ Windows® devices with Windows XP, Windows 7, and Windows 8.

Android™ devices with OS 3.0 and later.

iPod touch, iPhone and iPad devices with iOS 5 and later, and computers running OS X 10.6 and later.

AirPlay feature compatibility

AirPlay works with iPhone, iPad, and iPod touch with iOS 4.3.3 or later, Mac with OS X Mountain Lion, and Mac and PC with iTunes 10.2.2 or later.



Index

A

acoustic waveguide 6
AC power 8
AC power rating 27
AirPlay audio 13
alarms 17, 18
alarm wake-up source 17
AM antenna, internal 25
ambient light conditions 22, 23
AM/PM (12-hour) time 8, 22, 23
AM radio 14
AM reception 14
antennas, external 14, 19
artist name 16
audio CD 15
audio device, connecting 20
AUX IN connector 19, 20

B

battery replacement 25
Bose link 8, 19, 22, 24
brightness level 6, 22, 23

C

carton contents 7
CD, MP3 types of 15
CD player 15
CD play mode 15, 16
CD source 10, 15
CD source information 15
changing system settings 22
cleaning the system 27
clock display 8, 11
clock setup 8
clock time 8
clock time format 8, 22, 23
computer 7, 9, 12, 13, 26
connecting to network 9
connection panel 19
continuous play 22, 23
controlling SoundTouch 12
customizing operation 22

D

demonstration CD 6
dimensions 27
dipole antenna, external 21
display 11
display brightness 22, 23
downloading the SoundTouch app 9, 12

E

electrical noise sources 3, 25
electrical outlet 8
enhanced sound from audio devices 20
Ethernet connection 7
external antennas 19, 21
external sources, connecting 19, 20
external sources, using 20

F

factory settings 6, 22, 24
FM antenna 8
FM radio 14
FM reception 8
frequency display, radio 14

H

headphones, using 20
help, troubleshooting 25

I

internal AM antenna 25

L

Lifestyle system 22, 24
limited warranty 27
listening level, headphones 20
location, selecting 7
low-power standby 26

M

MP3 CDs 15
music files, navigating 16

N

network requirements 7

P

personalizing the system 6, 22
playing CDs 15
play mode 15, 16
poor reception 14, 21
power connection 8
power cord 8
power outage 8
power saving mode 26
preset number 10, 13, 14
presets, quick recall 10, 12, 14
presets, SoundTouch 12
presets, storing radio 14
press and hold operation 10

Q

quick recall, presets 14

R

radio alarm 17

radio data system (RDS) 6, 14, 22, 23

radio station 14

RDS 6, 14, 22, 23

rear panel 19

recall presets 10

recents 12

registration card 27

remote control 10

remote control battery 26

reset, wireless adapter 24

room code 22, 24

S

scan through a track 15

setting alarms 17

setup menu 22

shipping carton 7

sleep timer 11

snooze control 18

snooze time 18

song title 16

sounding alarm 18

SoundTouch app 12

SoundTouch app installation 9

SoundTouch app URL 9

SoundTouch help 12

SoundTouch pedestal setup 8

SoundTouch presets 12, 13

SoundTouch sources 12, 13

station frequency 14

stereo cables 20

stereo headphones connector 19, 20

stereo input connector 19

stopping an alarm 18

stored music library 7

storing a radio preset 19

system operation 10

system reset 22, 24

system settings 22

system standby timer 11, 22, 24

T

talk radio broadcasts 14

TALK RADIO mode 14

technical information 27

touch pad 10

touch pad control 22

touch sensitive control 10

troubleshooting tips 25

tuning AM/FM radio 14

turning alarm on or off 18

turning the system on or off 11

TV, connecting to a 20

U

unpacking the carton 7

using SoundTouch 6, 7

using the USB cable 9

V

volume level 10, 11

W

waveguide speaker technology 6

weak radio reception 14, 21

wireless adapter reset 24



BOSE[®]
Better sound through research[®]

©2013 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM370769 Rev. 00