







# PANARAY® LT 9403

## Full Range Loudspeaker



PROFESSIONAL SYSTEMS DIVISION

### Polar Plots 1/3 Octave Horizontal

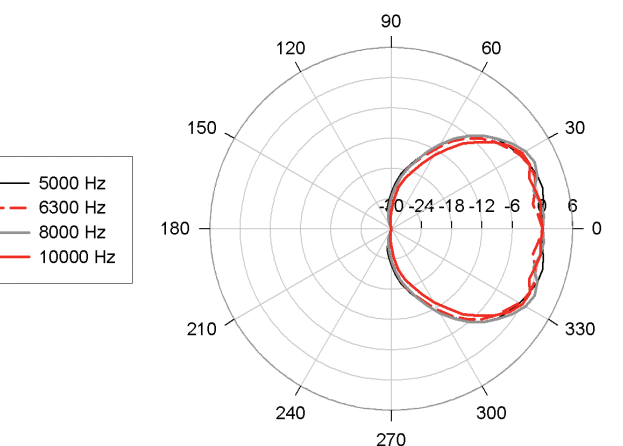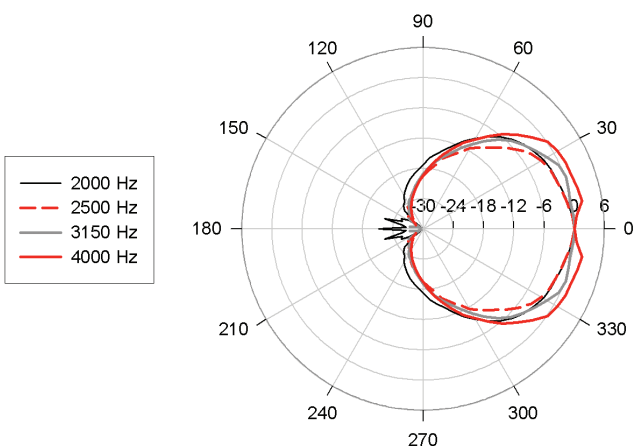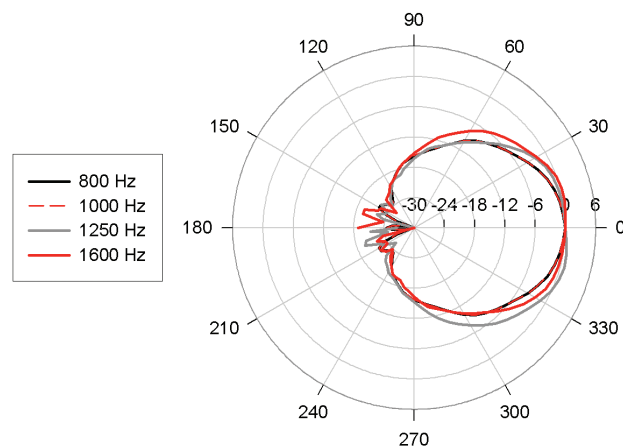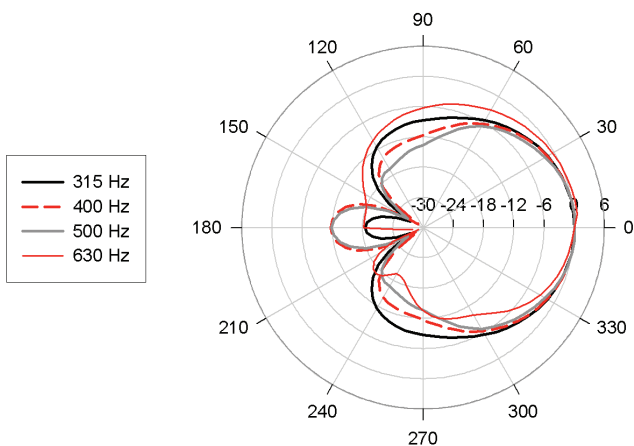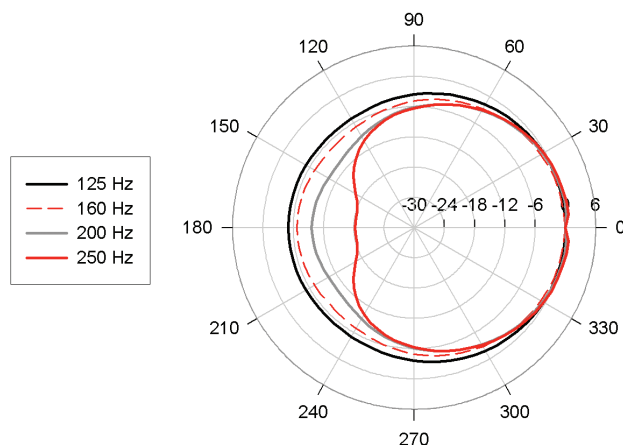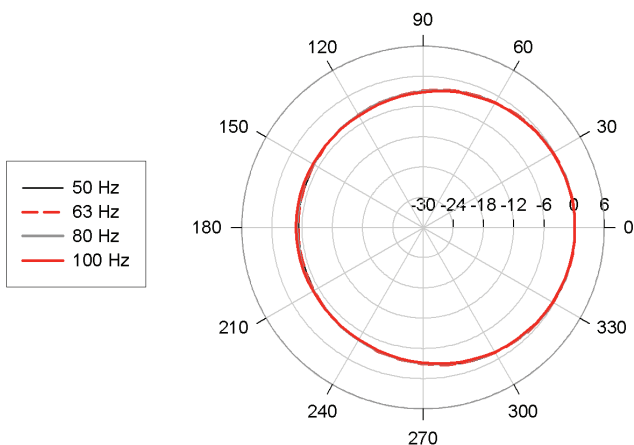


# PANARAY® LT 9403

## Full Range Loudspeaker







PROFESSIONAL SYSTEMS DIVISION

### Polar Plots 1/3 Octave Horizontal *continued*

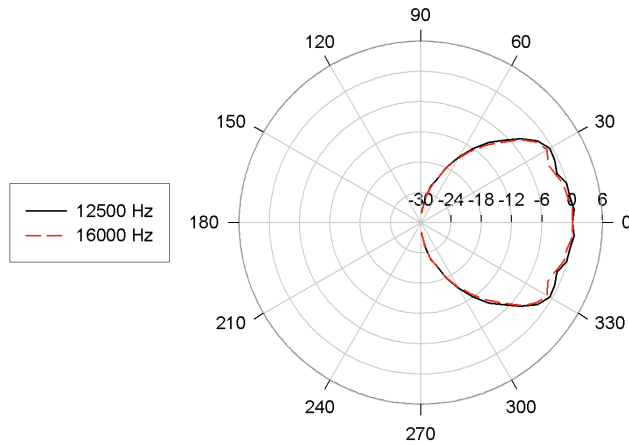

### Polar Plots 1/3 Octave Vertical

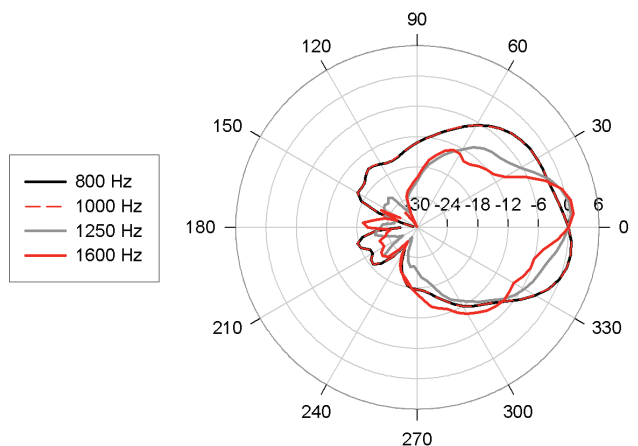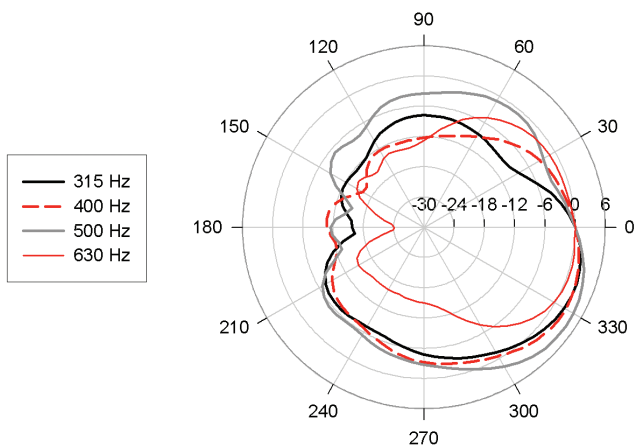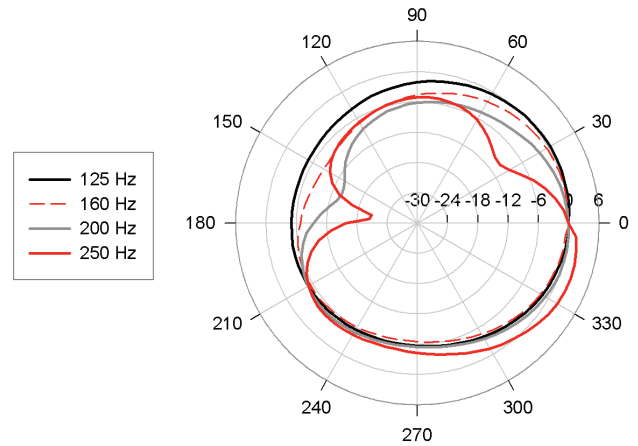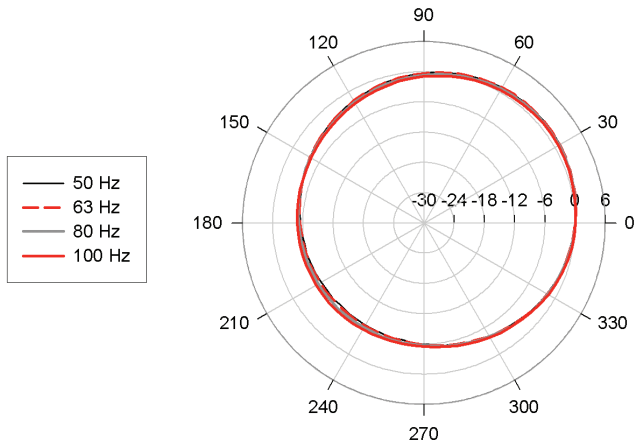

*continued on page 6*




# PANARAY® LT 9403

## Full Range Loudspeaker



PROFESSIONAL SYSTEMS DIVISION

### Polar Plots $\frac{1}{3}$ Octave Vertical *continued*

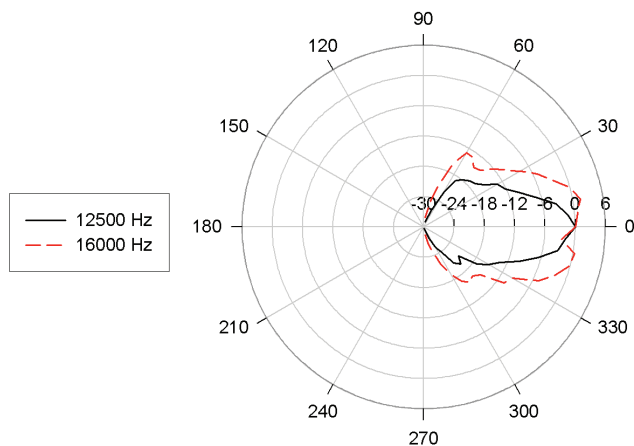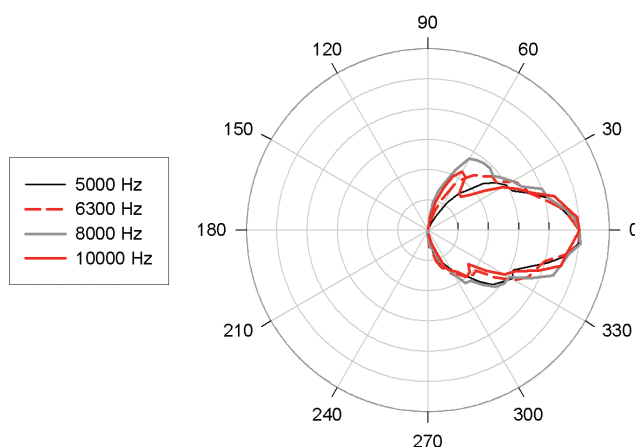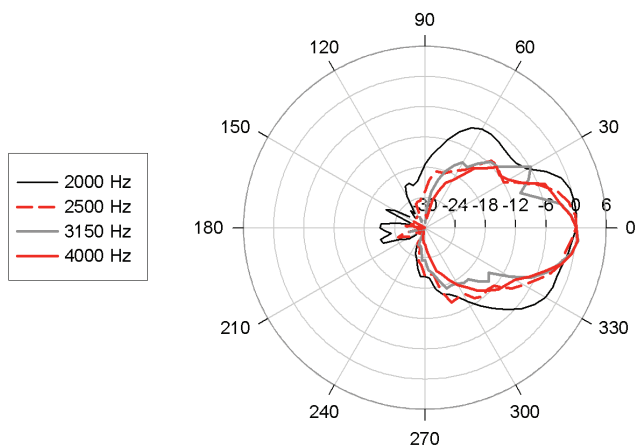


# PANARAY® LT 9403

## Full Range Loudspeaker




PROFESSIONAL SYSTEMS DIVISION

### Beamwidth

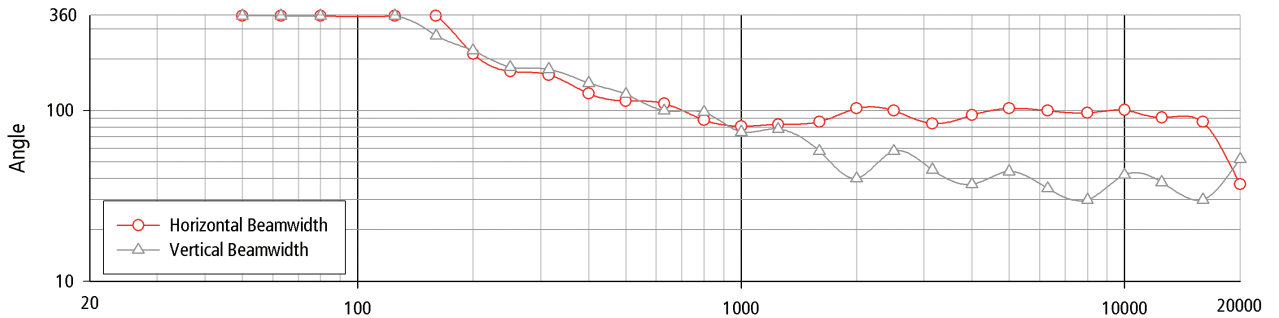

### Directivity Index and Q

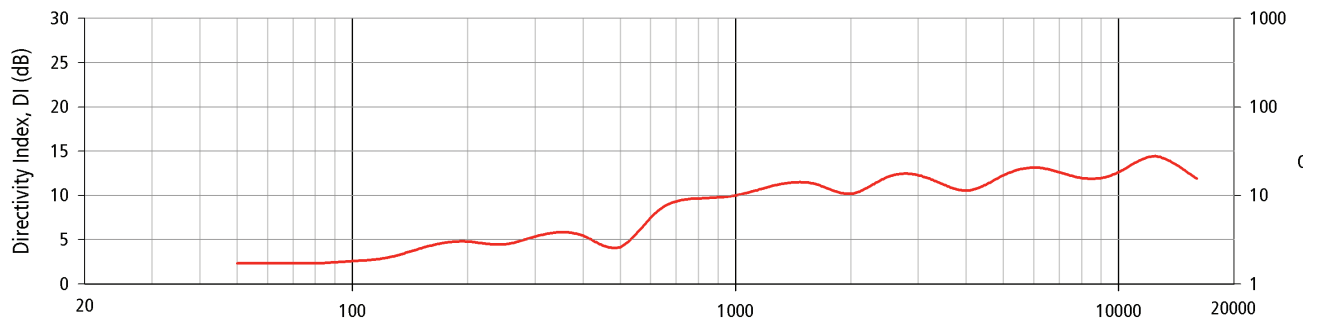

### On Axis Response – Impedance vs. Frequency

