



Bose® OE2i Audio Headphones

Owner's Guide | Brugervejledning | Bedienungsanleitung Guía de usuario | Notice d'utilisation | Manuale di istruzioni Felhasználói útmutató | Gebruiksaanwijzing | Podręcznik użytkownika Omistajan opas | Bruksanvisningen | คู่มือผู้ใช้ | 사용자 안내서 用户指南 | 使用者指南 | オーナーズガイド | دلیل المالک

Safety Information

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and properly use your new headphones. Please save this owner's guide for future reference.

CAUTIONS:

- Long-term exposure to loud music may cause hearing damage. Please avoid extreme volume when using headphones, especially for extended periods.
- Do not use headphones when operating a motor vehicle or anywhere the inability to hear outside sounds may present a danger to you or others. Check and follow local laws regarding headphone use.
- Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headphones. Be aware of how these sounds may vary in character so you can recognize them as needed.
- Do not drop, sit on, or allow the headphones to be immersed in water.

This product conforms to all applicable EMC Directive requirements. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

WARNING: DO NOT use mobile phone adapters to connect headphones to airplane seat jacks, as this could result in personal injury such as burns or property damage due to overheating. Remove and disconnect immediately if you experience warming sensation or loss of audio.


Introduction

Thank you for purchasing the Bose® OE2i audio headphones. Enjoy your music with smooth, full range sound, a comfortable on-ear fit and a contoured design that folds up for easy portability. An in-line remote and microphone provide convenient control of select Apple products.


For use with:

The remote and microphone are supported only by iPod nano (4th generation and later), iPod classic (120GB, 160GB), iPod touch (2nd generation and later), iPhone 3GS, iPhone 4, iPad, iPad 2 and 2009 models or later of MacBook and MacBook Pro. The remote is supported by iPod shuffle (3rd generation and later). Audio is supported by all iPod models.

Components

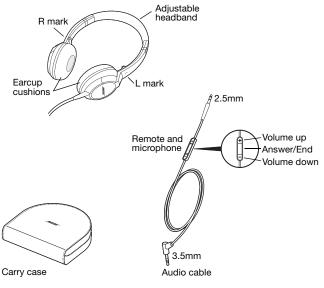

Storing your headphones

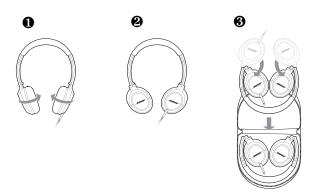

Note: Do not try to exceed the limits of the pivots or over-rotate the earcups.

Using your headphones

Wearing the headphones

After removing the headphones from the case and unfolding them (see page 5), put on the headphones using the markings that identify the left (L) and right (R) earcups. Adjust the headband so it rests gently on top of your head and the earcup cushions fit comfortably on your ears.

Cleaning the headphones

The Bose® OE2*i* audio headphones do not require scheduled cleaning. Should cleaning be necessary, simply wipe the outside surfaces with a soft cloth. Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

Connecting to your Apple device

Ensure that the 2.5mm plug is securely inserted into the left earcup. Plug the other end of the cable (3.5mm plug) securely into the audio output jack of the Apple audio device.



Using the headphones with your Apple device

The Bose OE2i headphones come with a small in-line remote with an integrated microphone for convenient control of select Apple products. Easily control volume, track selection and voice applications, plus switch between your calls and music.

Note: Full controls may not be available for some Apple products.

Basic functions

hold

Increase volume	Press and release the + button.					
Decrease volume	Press and release the - button.					
Call-related functions						
Answer a call	When you receive an incoming call, press and release the Answer/End button to answer.					
End a call	Press and release the Answer/End button.					
Decline an incoming call	Press and hold the Answer/End button for about two seconds, then release.					
Switch to an incoming or on-hold call and put the current call on	While on a call, press and release the Answer/End button once. Press and release again to switch back to the first					

call.

Switch to an incoming or on-hold call and end the current call	While on a call, press and hold the Answer/End button for about two seconds, then release.
Use Voice Control	Press and hold the Answer/End button. See iPhone User Guide for compatibility and usage information about this feature.

Media playback functions

Play or pause a song or video	Press and release the Answer/End button.
Skip to the next song or chapter	Press and release the Answer/End button twice quickly.
Fast-forward	Press and release the Answer/End button twice quickly and hold the second press.
Go to the previous song or chapter	Press and release the Answer/End button three times quickly.
Rewind	Press and release the Answer/End button three times quickly and hold the third press.

Replacement parts and accessories

Replacement parts and accessories such as the carry case, earcup cushion, and the audio cable can be ordered through Bose® Customer Service. See the contact information for your area included in this guide.

Troubleshooting

If you experience any trouble using your headphones, try the following troubleshooting instructions

Problem	What to do			
No audio or audio in one earcup only	 Ensure both ends of the audio cable are securely connected. Try a different audio device. 			
Distorted bass	Ensure both earcup cushions are firmly secured.			
Misshaped earcup cushion	The high-density earcup cushion foam will regain its shape after a few minutes in a neutral position.			
Microphone is not picking up sound	 Make sure the headphone plug is securely connected to the headphone jack. Make sure the microphone is not being blocked or covered. The microphone is located on the back of the Answer/End button. 			
Phone is not responding to button presses	 Make sure that the headphone plug is securely connected to the headphone jack. For multi-press functions: vary speed of presses. 			
Apple product is not responding to remote	Full controls may not be available for some Apple products.			

If any problem persists, contact Bose® Customer Service. See the phone number for your area, included in this guide.


Replacing earcup cushions


Remove earcup cushion:

- 1. Grasp the earcup cushion securely.
- 2. Pull up and out to remove the earcup cushion.

Re-attach earcup cushion:

- Place the edge of the earcup cushion skirt into the slot behind the earcup flange.
- Work the remainder of the skirt into the slot all the way around the earcup.

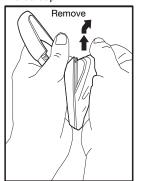

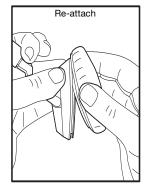

Limited Warranty

Your Bose® headphones are covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

What you must do to obtain Limited Warranty Service: Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

- Contact the Bose organization in your country/region (visit Global.Bose.com/register for Bose contact information in your country/region) for specific return and shipping instructions;
- Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
- Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Note: The serial number is located on the warranty card included in the carton.

Names and Contents of Toxic or Hazardous Substances or Elements							
	Toxic or Hazardous Substances and Elements						
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	
PCBs	Х	0	0	0	0	0	
Metal parts	Х	0	0	0	0	0	
Plastic parts	0	0	0	0	0	0	
Speakers	Х	0	0	0	0	0	
Cables	X	0	0	0	0	0	

0: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.

©2011 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Apple, iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, iPod touch and MacBook are trademarks of Apple Inc., registered in the U.S. and other countries.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

BOSE CORPORATION

USA

The Mountain, Framingham, MA, 01701 888 757 9943 owners Bose.com

Canada

9133 Leslie Street, Suite 120, L4B 4N1 800 905 2177 www.Bose.ca

Australia

Unit 3/2 Holker St.Newington NSW, 2127 1 800 061 046 www.Bose.com.au

Belgique/Belgie B-3700 Tongeren

B-3700 Tongeren 012 390 800 www.Bosebelgium.be

China

2203-2305 22F, West Gate Tower/1038 West Nanjing Road-MeiLongzhen Plaza, Shanghai, 200041 86 400 880 2266 www.Bose.cn

Denmark

2605 Brondby 4343 7777 www.Bose.dk

Deutschland

D-61381 Friedrichsdorf 0 6172 71040 www.Bose.de

France

78100 Saint Germain en Laye 01 30 61 67 39 www.Bosefrance.fr

India

Shriram Bhartiya Kala Kendra, 1 Copernicus Marg, New Delhi, 100-001 1 800 11 2673 www.Boseindia.com

Ireland

Castlebury Road, Carrickmacross, Co Monaghan 42 967 1500 www.Bose.ie

Italia

Via della Magliana 876 Roma, 00148 800 832 277 www.Bose.it

Japan

3° dV < ½ Ž DY25fj R J E 3f **3**JZ X #J I S > Rdfj R ^ Ri TY DY25fj R \ f LE`\j` " & I!!! 9% ! & (!!)!!#" h h h 23° dV2T **2**Ja

Mexico

Paseo de las Palmas # 405, 11000 001 866 693 2673 www.Bose.com.mx

Nederland

1135 GE Edam 0299 390290 www.Bose.nl

New Zealand

0800 501 511 www.Bose.co.nz

Norge

N-2213 Kongsvinger 62 82 15 60 www.Bose.no

Österreich Wienerbergstrasse 7

(10.OG) 01 6040 4340 www.Bose.at

Schweiz Hauptsrasse 134

061 975 77 33 www.Bose.ch

Sverige S-43153 M

S-43153 Mölndal 031 878850 www.Bose.se

United Kingdom

1 Ambley Green, Gillingham Business Park, Gillingham, Kent, ME8 ONJ 0844 209 2630 Info uk@Bose.com

Hong Kong

Suite 1203, Midas Plaza, 1 Tai Yau Street, San Po Kong, Kowloon, Hong Kong 852 2123 9000

support_hk@Bose.com Finland

Kornetintie 6b Helsinki, 380 010 778 6900 www.Bose.fi

Poland

ul. Woloska 12 Warszawa, 02-675 +48 (0)22-8522928 www.Bose.pl

World Wide Web

www.Bose.com www.Boseeurope.com

Made for



Better sound through research®

©2011 Bose Corporation, The Mountain, Framingham, MA 01701-9168 USA AM346800 Rev.0F